



USER MANUAL

Mobeye[®] ThermoGuard

CM2200

SW version 3.n

Attention! Very important

This user manual contains important guidelines for the installation and usage of the Mobeye® device as described in this manual. Please read these thoroughly before you start using the Mobeye® device!

In case of damage caused by disregarding the guidelines, the warranty becomes void.

The user must regularly check the proper functioning of the device. The manufacturer cannot be held liable for any damage or loss caused by any incorrect use or incorrect functioning of the Mobeye® device.

Safety guidelines

- The permitted ambient temperature during operation may not be exceeded (not lower than -10°C and not higher than 50°C).
- The device is intended for use in dry and clean places.
- Protect the device from moisture, heat and water splashing. Not intended for external use.
- The guidelines for the battery usage must be regarded.
- Do not expose the device to strong vibrations.
- Do not let it fall from height.
- Do not use in an environment where any inflammable gases, vapors or dust are present or could be present.
- Repair of the device may only be carried out by people, trained for Mobeye® repair.
- If the device must be repaired, only original replacement components may be used. The use of different parts may lead to damage of the Mobeye® device.

Use in accordance with the regulations

The purpose of this device in accordance with the regulations is sending SMS text messages and making telephone calls after an alarm situation. Other uses are not permitted and may invalidate the warranty.

Battery recycling

CR123 batteries, as used in the Mobeye ThermoGuard, are classified as non-hazardous waste and can be recycled. Please take empty batteries to a nearest collection point.

CONTENT

1.	General description	1
2.	Getting started	2
2.1	Insert a SIM card	2
2.2	Connect the temperature sensor to the unit	2
2.3	Insert the batteries	2
2.4	Enter the program mode	2
2.5	Program at least one telephone number	2
2.6	Set a minimum and/or maximum temperature limit	3
2.7	Switching on/off	3
3.	Use of inputs and external power supply	4
3.1	Connect a sensor to the input	4
3.2	Using external power	4
4.	Configuration	5
4.1	Program mode	5
4.2	The (security) code	5
4.3	Programming the settings by SMS	5
4.4	List of SMS commands for configuration	6
5.	Possible settings	7
5.1	Phone numbers	7
5.2	Set a minimum and/or maximum temperature limit	7
5.3	Identification text	7
5.4	Alarm texts	7
5.5	SMS on/off	8
5.6	Call on/off	8
5.7	Input type	8
5.8	Temperature delay time	8
5.9	Alarm delay time	8
5.10	Inactive time	8
5.11	Alarm repeat time	9
5.12	Power failure delay time	9
5.13	Power failure message	9
5.14	Temperature calibration	9
5.15	Test message	9
5.16	System reset	10
6.	Request list of the settings, status and temperature	11
7.	Technical messages and status feedback	12

1. GENERAL DESCRIPTION

The Mobeye ThermoGuard is a battery operated GSM module used to send out an alarm after the temperature gets out-of-range, a triggered input or - if external power supply is used- after a power failure.

The Mobeye ThermoGuard is pre-programmed with standard action-reaction patterns. To change this behaviour, please refer to chapter 4.

The factory settings of the Mobeye ThermoGuard cause following reactions:

- In case of a temperature alarm, the Mobeye ThermoGuard sends an alarm SMS text message and calls to the phone numbers as programmed. The SMS message contains the text 'Temperature too high' or 'Temperature too low', followed by the measured temperature.
- As soon as the temperature gets back to a value inside the range, an SMS text message is sent to the set telephone numbers containing the text 'Temperature OK'.
- In case one of the inputs is activated by a sensor, the Mobeye ThermoGuard sends an alarm SMS text message and calls to the phone numbers as programmed by the user.
- In case the temperature and/or the inputs remain in the alarm status, the Mobeye ThermoGuard repeats sending the SMS alarm message every hour.
- In case the temperature sensor is removed, the Mobeye ThermoGuard sends an SMS text message to the administrator (first telephone number) containing the text 'Temperature sensor not connected'.
- In case the batteries need to be replaced, the Mobeye ThermoGuard sends a 'battery low' SMS text message to the administrator.
- In case an external power supply is used and a power failure occurs, the Mobeye ThermoGuard sends a 'power failure' SMS text message to the administrator. In case the power is restored, the Mobeye ThermoGuard sends a 'power restored' SMS text message to the administrator.

2. GETTING STARTED

To get started with the Mobeye ThermoGuard at least the following steps need to be taken in the following order:

1. Place SIM card (with PIN code 0000 or without PIN code)
2. Connect the temperature sensor to the unit
3. Place the batteries
4. Enter the program mode
5. Program at least one telephone number (administrators' number)
6. Set a minimum and/or maximum temperature limit
7. Arming/disarming the system

These steps are further explained in this chapter. After these steps the module will be operational.

2.1 INSERT A SIM CARD

Open the enclosure with the 4 screws and insert a SIM card into the module. Push the black cover outward slightly to open the holder. Before installing the SIM card should have PIN code "0000", or PIN code removed.

(A PIN code can be changed or removed by putting the SIM card in to any mobile phone and entering the 'security' menu)

NB: Make sure the SIM card is inserted before the batteries are inserted. In case of a SIM card change, please first remove the batteries (and remove any other external power supply).

2.2 CONNECT THE TEMPERATURE SENSOR TO THE UNIT

Plug the external temperature sensor into the metal socket and press it firmly.

2.3 INSERT THE BATTERIES

Insert the two batteries (CR123) in the module. Use the +/- indication for the correct placement. The green LED will flash to indicate that the module is not configured (at least one telephone number should be programmed).

2.4 ENTER THE PROGRAM MODE

Directly after inserting the batteries, the Mobeye ThermoGuard switches to the program mode. First the GSM module establishes network connection. During this time the LED flashes 2 sec. on/1 sec. off. Normally this takes 10-30 seconds. Once the connection is established the status LED starts flashing 1 sec. on/1 sec. off (or stays on continuously in case the first telephone number has been configured).

In program mode, the device is ready to receive SMS commands. If no correct command is received for 3 minutes, the GSM module switches off in order to save the batteries. The unit returns to the low power operational mode. The Mobeye ThermoGuard returns to the program mode by pressing the on/off button for 5 seconds, until the LED starts flashing (or stays on continuously).

If the unit is connected to an external power supply, the ThermoGuard has network connection all the time and the unit is in program mode all the time.

2.5 PROGRAM AT LEAST ONE TELEPHONE NUMBER

The Mobeye ThermoGuard is able to send messages up to 5 telephone numbers. The first telephone number belongs to the administrator. Technical messages (such as *battery low*) are sent to the administrator only. Without the administrators' phone number, the Mobeye ThermoGuard cannot function.

When the ThermoGuard is in initial (factory) status and the batteries are inserted (so the LED is flashing), the administrators' number is programmed by calling the telephone number of the Mobeye ThermoGuard using the administrators' phone. The unit will recognize this number and store it as administrator (telephone number 1). The administrator will receive a confirmation SMS text message including the security code. This code is needed to program the other settings in the unit.

NB: For this way of programming the number recognition in the administrator's phone must be 'on'. To program or change the administrators' number by SMS command, please refer to 4.2.

2.6 SET A MINIMUM AND/OR MAXIMUM TEMPERATURE LIMIT

A separate high and/or low limit for the temperature can be set. Both limits can be set between -20 and +70 °C. Negative values are entered by placing a “-” in front of the value.

To enter a temperature limit, be sure the Mobeye ThermoGuard is in program mode. Send an SMS text message to the unit with following content:

SMS command lower limit:	1111 LTL:
example :	1111 LTL:-5
SMS command upper limit:	1111 HTL:
example :	1111 HTL:25

Be aware of the space after 1111.

2.7 SWITCHING ON/OFF

After the previous steps, the Mobeye ThermoGuard is ready for use.

It is armed (switched on) automatically. The green LED blinks once every 3 seconds.

In order to switch off (disarm) the Mobeye ThermoGuard:

- Press the on/ off button at the upper side for 1 second. The green LED switches off to indicate the disarmed status.

In order to switch on (arm) the Mobeye ThermoGuard:


- Press the on/ off button at the upper side for 1 second. The green LED blinks once every 3 seconds (or stays on continuously in case of an external power supply) to indicate the armed status.

3. USE OF INPUTS AND EXTERNAL POWER SUPPLY

3.1 CONNECT A SENSOR TO THE INPUT

It is possible to connect external sensors to the inputs. As a standard reaction after a triggered input, the Mobeye ThermoGuard sends an SMS text message to the preset numbers and calls these numbers.

Insert the 2 wires of an external sensor through the hole of the enclosure to the inside part and next in the two connectors of input 1 (press on the green pins for connecting the wires). It does not matter which wire is connected to which connector. If necessary the wires can be extended up to 5 meters using appropriate wire material.

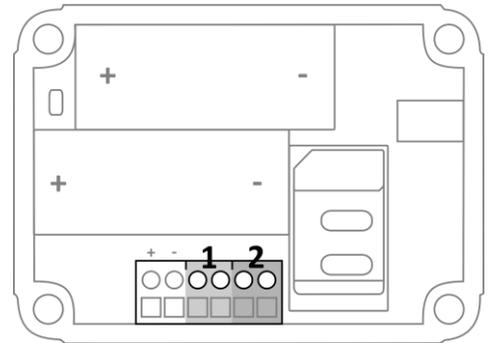

When using a second input, connect this to input 2.


As default the inputs are programmed as Normally Open (NO) contacts. This means the inputs are triggered if the input is closed for at least 1 second. In case the contact is Normally Closed (NC), please refer to paragraph 5.5. If you require the sensor to be activated for a shorter or longer period before triggering an alarm, please refer to 5.8.

3.2 USING EXTERNAL POWER

Although the Mobeye ThermoGuard is designed to run on batteries, it is possible to use an external power supply. In this mode the module is always in connection with the GSM network and therefore always in program mode. In case the power fails, the batteries take over the functioning and the administrator is informed by an SMS text message. The module continues operating albeit in the low power mode. This means the GSM module switches off and only establishes network connection in case it needs to send out an alarm, test message or low battery alert.

Connect the external power adapter (or any other regulated 12VDC power supply) to the power input of the connector (press on the green pins for connecting the wires):

- V+ (black lead with white stripe) to “+”
- Ground (black lead) to “-“

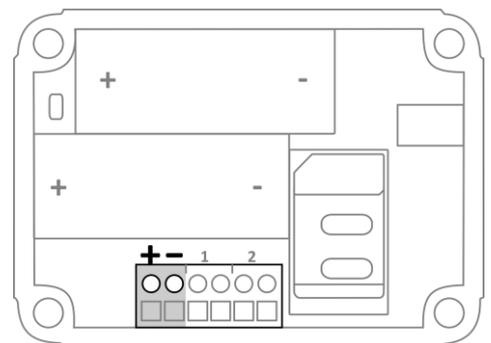

4. CONFIGURATION

To program the Mobeye ThermoGuard, the GSM module must have network connection. In case only batteries are used, first switch the unit to the program mode. Next send SMS commands for the configuration.

All settings are stored and will be kept in the unit, even in case the power supplies are removed.

4.1 PROGRAM MODE

Directly after inserting the batteries, the Mobeye ThermoGuard switches to the program mode. First the GSM module establishes network connection. During this time the LED flashes 2 sec. on/1 sec. off. Normally this takes 10-30 seconds. Once the connection is established the status LED starts flashing 1 sec. on/1 sec. off (or stays on continuously in case the first telephone number has been configured).

In program mode, the device is ready to receive SMS commands. If no correct command is received for 3 minutes, the GSM module switches off in order to save the batteries. The unit returns to the low power operational mode. The Mobeye ThermoGuard returns to the program mode by pressing the on/off button for 5 seconds, until the LED starts flashing (or stays on continuously).

If the unit is connected to an external power supply, the ThermoGuard has network connection all the time and the unit is in program mode all the time.

The program mode is interrupted by pressing the on/off button for one second until the LED switches off. The unit is switched off completely (disarmed).

4.2 THE (SECURITY) CODE

For configuration activities the (security) code of the Mobeye ThermoGuard must be used. The initial (security) code is '1111'. You can change the (security) code to your own code. See section 4.4.

4.3 PROGRAMMING THE SETTINGS BY SMS

To program the settings by SMS text message:

1. Be sure the ThermoGuard is in program mode (please refer to 4.1).
2. Send an SMS message with the (security) code and the command
3. The green LED blinks 3 times to indicate the successful configuration. In case of an incorrect command, the red LED flashes 5 times.

SMS messages should have the following content: **CODE COMMAND:OPTION**

- Do not forget the space character between (security) code and command.
- The commands are case sensitive. Use capitals for the commands.
- Several commands may be combined in one SMS message (with a maximum of 160 characters) by placing a # between the commands.

CODE COMMAND:OPTION#COMMAND:OPTION#COMMAND:OPTION

See section 4.4 for a full list of SMS commands.
--

4.4 LIST OF SMS COMMANDS FOR CONFIGURATION

Setting	SMS Command	Options	Default
Change security code	INSTCODE:	0000..9999	1111
Set telephone number for alarm messages	TEL1: TEL5:		Empty
Delete telephone number	DEL1 DEL5		
Low temperature limit	LTL:	-20.. +70 (°C)	OFF
High temperature limit	HTL:	-20.. +70 (°C)	OFF
Identification text	NAME:	20 characters	Mobeye
Call on/off	CALL:	ON, OFF	ON
SMS on/off	SMS:	ON, OFF	ON
Input type input 1	TYPEIN1:	NO, NC	NO
Input type input 2	TYPEIN2:	NO, NC	NO
Temperature delay time	DELAYTEMP:	0..999 (min)	0
Delay on input 1	DELAY1:	0..999 (sec)	1
Delay on input 2	DELAY2:	0..999 (sec)	1
Inactive time input 1	INACTIVEIN1:	0..60 (min)	0
Inactive time input 2	INACTIVEIN2:	0..60 (min)	0
Alarm repeat time	REPEAT:	0..24 (hrs)	1
Alarm text at too low temperature	TEXT1:	20 characters	Temperature too low:
Alarm text at too high temperature	TEXT2:	20 characters	Temperature too high:
Text at restored temperature	TEXT3:	20 characters	Temperature OK:
Alarm text input 1	TEXT4:	20 characters	Alarm 1
Alarm text input 2	TEXT5:	20 characters	Alarm 2
Power failure delay time	DELAYPOW:	0..999 (min)	0
Power message	POWERMESSAGE:	OFF,ALERT,ALARM	ALERT
Temperature calibration	TEMPOFFSET:	-9,0 ... 9,0 (°C)	0
Interval 'test SMS'	TEST:	0..30 (days)	0

Example: Set CALL to off: 1111 CALL:OFF
(space between "1111" and CALL)

5. POSSIBLE SETTINGS

5.1 PHONE NUMBERS

The Mobeye ThermoGuard is able to send alarm messages to up to 5 phone numbers. The first telephone number (TEL1) belongs to the administrator. Only this number receives all system messages. The other phone numbers (including the administrator) only get the alarm messages.

To set or change telephone numbers:

SMS command 1st telephone number: **TEL1:**
example: 1111 TEL1:07123456789

.... similar for TEL2:, TEL3:, TEL4 and TEL5:

For foreign number, start with + followed by the country code (and depending on the country leave out the zero for the local area code).

example: 1111 TEL1:+447123456789

To delete telephone numbers:

SMS command delete 1st telephone number: **DEL1**
example: 1111 DEL1

.... similar for DEL2, DEL3, DEL4 and DEL5

5.2 SET A MINIMUM AND/OR MAXIMUM TEMPERATURE LIMIT

A separate high and/or low limit for the temperature can be set. Both limits can be set between -20 and +70 °C. Negative values are entered by placing a “-” in front of the value.

SMS command lower limit: **1111 LTL:**
example : 1111 LTL:-5
SMS command upper limit: **1111 HTL:**
example : 1111 HTL:25

5.3 IDENTIFICATION TEXT

It is possible to add a standard identification text (NAME) to all messages sent out by the Mobeye ThermoGuard. The alarm messages are a combination of the name and the alarm text. A user defined identification has a length of maximum 20 characters. The default identification text is ‘Mobeye’.

SMS command identification text: **NAME:**
example: 1111 NAME:my Mobeye device

5.4 ALARM TEXTS

Unique alarm texts can be programmed into the Mobeye ThermoGuard. User defined texts have a maximum length of 20 characters.

Following default texts are programmed:

Text 1 (low temperature alarm):	Temperature too low:
Text 2 (high temperature alarm):	Temperature too high:
Text 3 (temperature restored):	Temperature OK
Text 4 (input 1):	Alarm 1
Text 5 (input 2):	Alarm 2
Text 6 (power failure):	Power failure
Text 7 (power restoration):	Power restored

SMS command text low temperature alarm: **TEXT1:**
SMS command text high temperature alarm: **TEXT2:**
SMS command text restored temperature: **TEXT3:**
SMS command text input 1: **TEXT4:**
SMS command text input 2: **TEXT5:**
SMS command text power failure: **TEXT6:**
SMS command text restored power: **TEXT7:**
example: 1111 TEXT4:heater failure

5.5 SMS ON/OFF

By default, the Mobeye ThermoGuard sends alarm notifications via text message and calls (you will hear a beep signal) to the preset contact persons. By turning off the SMS, the unit will only call after a triggered input. Be aware, by just being called you will not know the actual temperature.

SMS command enable / disable SMS: **SMS:ON** or **SMS:OFF**
example: 1111 SMS:OFF

5.6 CALL ON/OFF

By default, the Mobeye ThermoGuard sends alarm notifications via text message and calls to the preset contact persons. By turning off the CALL, the unit will only send an SMS text message as alarm notification. It is not possible to switch off both the SMS and the call.

SMS command enable / disable call: **CALL:ON** or **CALL:OFF**
example: 1111 CALL:ON

5.7 INPUT TYPE

The input type defines the character of the inputs IN1 and IN2. This can be Normally Open (NO) or Normally Closed (NC). If an input is set to NO, the alarm will be triggered as soon as the terminals of the input are closed. If the input is set to NC, the alarm is triggered in case the connection between the input terminals is broken. The default input type is set to NO.

SMS command input type input 1: **TYPEIN1:NO** or **TYPEIN1:NC**
SMS command input type input 2: **TYPEIN2:NO** or **TYPEIN2:NC**
example: 1111 TYPEIN1:NC

5.8 TEMPERATURE DELAY TIME

The temperature delay time defines the duration a temperature limit is violated before an alarm is initiated. If the temperature returns to the non-alarm status within the delay time, no alarm is sent. The time can be set between 0 and 999 minutes.

As default, the temperature delay time is set to 0 minutes.

SMS command temperature delay time: **DELAYTEMP:**
example: 1111 DELAYTEMP:15

5.9 ALARM DELAY TIME

The input delay time defines the time that the input is triggered before an alarm is initiated. If the input returns to the non-alarm status within the delay time, no alarm is sent. The time can be set between 0 and 999 seconds.

As default, the input delay time is set to 1 second.

SMS command alarm delay input 1: **DELAY1:**
SMS command alarm delay input 2: **DELAY2:**
example: 1111 DELAY1:999

5.10 INACTIVE TIME

The “inactive time” defines the time an input is not active after an activation. During the inactive time, no new alarm message will be sent. Only when the input returned to the non-alarm status, gets activated again and remains active, an alarm will be sent yet after the inactive time. If the time is set to “0” (minutes), the input is active again immediately after returning to the non-alarm status. The time can be set between 0 and 60 minutes. As default, the inactive time is set to “0”.

SMS command inactive time input 1: **INACTIVEIN1:**
SMS command inactive time input 2: **INACTIVEIN2:**
example: 1111 INACTIVEIN2:45

5.11 ALARM REPEAT TIME

In order to emphasize the urgency of the alarm messages, all alarms can be repeated. As long as the alarm status has not returned to the inactive status, the SMS alarm will be repeated after the 'alarm repeat time'. The time can be set between 0 and 24 hours. As default the alarm repeat time is set to 1 hours.

SMS command alarm repeat time: **REPEAT:**
 example: 1111 REPEAT:20

5.12 POWER FAILURE DELAY TIME

In case the Mobeye ThermoGuard is powered externally and the power fails it can notify the contact person(s). The power failure delay time defines the time that the power fails before an alarm is initiated. If the power is restored within the delay time, no alarm is sent. The time can be set between 0 and 999 minutes and is only accepted if the POWERMESSAGE is set to 'ALARM'. As default, the delay time is set to 0.

SMS command power failure delay time: **DELAYPOW:**
 example: 1111 DELAYPOW:15

5.13 POWER FAILURE MESSAGE

In case the Mobeye ThermoGuard is powered externally and the power fails it sends an SMS text message to the administrator (setting: 'ALERT'). The message is only sent in case the unit is armed. This message can be set to 'ALARM' or 'OFF'. If the setting is 'ALARM' the power failure message will be sent to all contact persons (SMS and or CALL, following the SMS on/off and CALL on/off settings). The setting 'OFF' means that no power failure message is sent. The default setting for the 'power failure message' is set to "ALERT".

SMS command power failure message: **POWERMESSAGE:ALARM** (or **ALERT** or **OFF**)
 example: 1111 POWERMESSAGE:ALARM

5.14 TEMPERATURE CALIBRATION

The temperature sensor is digital and high quality. For special applications it is possible to calibrate the sensor and program a correction. The adjusted temperature will be used in the measurement and reports.

Example: the Mobeye ThermoGuard measures 13 °C. Actual ambient temperature: 13,5 °C. To adjust this difference, +0,5 degrees shall be programmed.

SMS-command calibration: **TEMPOFFSET:**
 example: 1111 TEMPOFFSET:0,5

5.15 TEST MESSAGE

The Mobeye ThermoGuard can send regular test SMS messages (*keep alive*) to the administrator (first phone number), to ensure the proper functioning of the unit. The test message function is only active if the unit is armed.

The interval between the test messages can be set between 0 days (no test message) and 30 days. The default test interval is set to 0 (no test message).

SMS command interval test message: **TEST:**
 example: 1111 TEST:21

5.16 SYSTEM RESET

To reset the Mobeye ThermoGuard to its factory settings:

1. Remove the batteries (and external power supply)
2. Press the outside button while reinserting the batteries. Keep it pressed for (about) another 5 seconds
3. Release the button immediately after the LED starts to flash
4. If relevant, connect the external power supply.

After a successful reset, the status LED on the keypad blinks green to indicate that the module is not configured. The security code is back to factory settings as well.

7. TECHNICAL MESSAGES AND STATUS FEEDBACK

Technical messages

In the event of technical issues the administrator receives an SMS message. Possible technical messages are:

Message	Reason
Low batteries, external power supply OK	Power is available, batteries need to be replaced
No external power supply, batteries OK	No external power supply, batteries are able to take over operation in low power mode
Low batteries, no external power supply	No external power supply, batteries need to be replaced
External power supply OK, batteries OK	The external power is restored (or the adapter is plugged in a socket), batteries do not need to be replaced
(delayed message)	If (delayed message) is added to the SMS text messages, the message couldn't be sent earlier, due to a SIM card failure or GSM network failure.

When receiving one of the above mentioned technical messages, please take appropriate action as soon as possible. During the battery replacement, the SIM card does not have to be removed.

Status feedback

LED pattern	Status	Required action
Blinking green, 1 second on / 1 second off	Module not configured	Configure at least one telephone number
1 green flash every 3 seconds	Module is switched on, powered by batteries	No action required
Green LED stays on continuously	Module is switched on, powered by an external source	No action required
Blinking green, 2 seconds on, 1 second off	Module establishes network connection to send an alarm message	Wait until the network connection is established and the message is sent
Blinking green, 3 seconds on, 1 second off	Module establishes network connection to get to program mode	Wait until the network connection is established before programming
2 flashes red, every 3 seconds	No GSM connection	Try the SIM card in any mobile telephone; replace SIM card using other telecom provider; try the module at another location
3 flashes red, every 3 seconds	No valid SIM card or wrong PIN	Try the SIM card in any mobile telephone; remove PIN code; check credit; replace SIM card
Blinking 3 times green	Successful programming action	No action required
Blinking 5 times red	Faulty programming action	Check SMS command
4 red flashes every 3 seconds	Low batteries	Replace both batteries

Technical specifications

GSM	:	Quad band EGSM, 850/900/1800/1900 MHz
Batteries	:	2* CR123 (lithium)
Battery life in normal mode	:	>1 year
Ext. power connection	:	12 VDC (+/- 2 VDC) / min. 500 mA. (optional)
Power consumption low power	:	ca 50 μ A. stand-by / max. ca. 500 mA
Power consumption 12V	:	ca 50 mA. stand-by / max. ca. 500 mA
Dimensions	:	80 x 60 x 40 mm
Ambient temperature	:	-10 °C until +50 °C

This manual is published by Mobeye®.

All rights, the translation included are reserved. Any reproduction, either photocopy, microfilm or saved in an automated data dictionary, only after written approval of the Publisher. Reprinting, even in summary, is prohibited.

This user manual meets the technical requirements at the moment of printing. Changes in technology and equipment are reserved.

© Copyright 2014 by Mobeye, version CM2200EN140616



Declaration of Conformity

Herewith we, Mobeye, declare that the product

Mobeye CM21 telemetry module

And the derived products

**CM2000, CM2100, CM2200, CM2300,
CM2300FS, CM2400, CM2500, CM2600**

are in compliance with the essential requirements of the following European standards / EU Directives:

Directive 73/23/EEC (low voltage directive)

Directive IEC/EN 50130 Electromagnetic compatibility

Directive 1995/5/EC R&TTE (Radio & Telecommunications Terminal Equipment)

The conformity with the essential requirements of 1995/5/EC has been verified against:

ETSI EN 301 489-1 V1.5.1

ETSI EN 301 489-7 V1.2.1

ETSI EN 301 511 V9.0.2

CENELEC EN 60950:2001

Mobeye B.V., Poeldonkweg 5, 5216 JX 's-Hertogenbosch, The Netherlands

Name: J.P.K. van de Vijver,
Position: General Manager

Date: 31 maart 2013