



USER MANUAL

Mobeye® WaterGuard-FS

CM2300FS

Attention! Very important

This user manual contains important guidelines for the installation and usage of the Mobeye® device as described in this manual. Please read these thoroughly before you start using the Mobeye® device.

In the case of damage caused by disregarding the guidelines and the instructions for use, no liability is accepted and the warranty becomes void. The user must regularly check the proper functioning of the Mobeye® device. The manufacturer cannot be held liable for (direct and indirect) damage as a result of incorrect operation or incorrect functioning of the device, software, internet or telecom connection. The manufacturer is in no way liable for the loss of personal passwords or codes.

Safety guidelines

- The permitted ambient temperature during operation may not be exceeded (not lower than -10 °C and not higher than 50 °C).
- The device is intended for use in dry and clean places.
- Protect the device from moisture, heat and water splashing. Not intended for external use.
- The guidelines for the battery usage must be regarded.
- Do not expose the device to strong vibrations.
- Do not let it fall from height.
- Do not use in an environment where any inflammable gases, vapors or dust are present or could be present.
- Repair of the device may only be carried out by people, trained for Mobeye® repair.
- If the device must be repaired, only original replacement components may be used. The use of different parts may lead to damage of the Mobeye® device.

Use in accordance with the regulations

The purpose of this device in accordance with the regulations is sending messages and making telephone calls after an alarm situation. Other uses are not permitted and may invalidate the warranty.

Battery recycling

When disposing of this product, separate the product and the CR123 batteries from other waste streams to ensure that it can be recycled in an environmentally sound manner. For more information on collection and proper disposal, please contact your local government office or the retailer where you purchased this product.

CONTENT

1. General description	4
2. Standard behaviour	5
2.1 Mobeye WaterGuard-FS with Mobeye SIM and Internet Portal	5
2.2 Mobeye WaterGuard-FS with own SIM card	6
3. Getting started	7
3.1 Insert the SIM card	7
3.2 Insert the batteries	8
3.3 Connect the water float sensor to input 1	8
3.4 Connect an external power supply (optionally)	9
3.5 Connect a sensor to the second input (optionally)	9
4. Programming when using the Mobeye SIM and portal	10
4.1 Sign up in the Mobeye Internet Portal	10
4.2 Register the Mobeye SIM card	10
4.3 Enter the program mode	11
4.4 Activate the device in the portal	11
4.5 Configuration and synchronisation	12
4.6 Basics of the Mobeye Internet Portal	12
4.7 Switching on/off	14
4.8 Confirmation of the alarm message	14
4.9 System reset	15
5. Possible settings	16
5.1 Alarm phone numbers	16
5.2 Call on/off	16
5.3 SMS on/off	16
5.4 Alarm delay time	17
5.5 Alarm repeat time	17
5.6 Input type	17
5.7 Exit delay time	17
5.8 Inactive time	18
5.9 Power failure delay time	18
5.10 Power failure message	18
5.11 Buttonlock	19
5.12 Low power mode	19
5.13 Test message	19
6. Programming when using own SIM card	21
6.1 Program mode	21
6.2 Program at least one telephone number	21

6.3	Programming the settings by SMS	22
7.	List of SMS commands for programming with own SIM	23
7.1	List of SMS commands	23
7.2	Switching on/off	24
7.3	Confirmation of the alarm message	25
7.4	System reset	25
7.5	SMS reports when using own SIM card	26
7.6	Technical messages	27
8.	Status feedback	28

1. GENERAL DESCRIPTION

The Mobeye WaterGuard-FS is a battery operated monitoring device with GSM module used to send alarm notifications after detection of a water based fluid using the water float sensor, after a triggered second input or - if an external power supply is used - after a power failure.

In order to activate the device, a few steps are to be followed.

First of all you'll have to choose a SIM card to place in the device. You can use the Mobeye SIM card or your own SIM card. The Mobeye SIM card provides access to the Mobeye Internet Portal. In this management environment the device is given additional functions such as online programming, status and history display, more options for forwarding messages and it will monitor test messages (keep alive). In addition, the Mobeye SIM is a cost-effective M2M roaming SIM card that can use multiple providers per country worldwide and offers more security than a provider-bound SIM card.

When using your own SIM card the most important alarm functions such as calling and/or texting after an alarm will also work.

Where the installation steps differ for both modes of use, this is indicated below. The use of the Mobeye Internet Portal with Mobeye SIM card is also referred to as Mobeye SIM/Portal.

2. STANDARD BEHAVIOUR

2.1 MOBEYE WATERGUARD-FS WITH MOBEYE SIM AND INTERNET PORTAL

The Mobeye WaterGuard-FS, equipped with a Mobeye SIM card and registered on the Mobeye Internet Portal, has the following standard behaviour as factory settings:

- When the water sensor is closed, the Mobeye WaterGuard-FS sends an alarm message to the Mobeye Internet Portal and calls the phone numbers programmed in by the user. The Portal forwards the alarm as text message and/or e-mail to the 'alarm contacts'.
- As soon as the sensor opens again (no water is detected anymore), a message is sent to the Mobeye Internet Portal. The Portal forwards the alarm as SMS message and/or e-mail.
- When the additional input is activated by a sensor, the Mobeye WaterGuard-FS sends an alarm message to the Mobeye Internet Portal and calls the phone numbers programmed in by the user. The Portal forwards the alarm as text message and/or e-mail to the 'alarm contacts'.
- When one of the inputs remain in the alarm status, the Mobeye WaterGuard-FS repeats sending the alarm message via the Mobeye Internet Portal every four hours.
- When an external power supply is used and a power failure occurs, the Mobeye WaterGuard-FS sends a 'power failure' message to Mobeye Internet Portal, to be forwarded to the 'alarm contacts'. When the power is restored, the Mobeye WaterGuard-FS sends a 'power restored' message.
- When the batteries need to be replaced, the Mobeye WaterGuard-FS sends a 'low battery' message to the Mobeye Internet Portal. The portal forwards this to the 'service' contacts.
- The unit will send test messages to the portal as communication check (default: every 7 days). If these are not received in time, the portal sends an exception message to the 'service' contacts.

Chapter 5 describes how to influence the standard behaviour.

As described, the Mobeye WaterGuard-FS will, in addition to calling in the event of an alarm, send various messages to the Mobeye Internet Portal. This is done via data traffic where possible. As a fallback, the alarm messages are sent to the portal via SMS. Both methods of communication are included in the flat fee of the SIM card. Messages can be forwarded from the portal to contacts such as SMS and / or free e-mail. If the SMS credits run out, the account holder automatically receives a message to upgrade them online.

2.2 MOBEYE WATERGUARD-FS WITH OWN SIM CARD

The Mobeye WaterGuard-FS, equipped with your own SIM card, has the following standard behavior as factory settings:

- When the water sensor is closed, the Mobeye WaterGuard-FS sends an alarm SMS text message and calls the phone numbers programmed in by the user. The SMS message contains the text 'Mobeye Water alarm'.
- As soon as the sensor opens again (no water is detected anymore), an SMS text message is sent to the set telephone numbers containing the text 'Mobeye Water Level OK'.
- When the additional input is activated by a sensor, the WaterGuard-FS sends an alarm SMS text message and calls the phone numbers programmed in by the user.
- When one of the inputs remain in the alarm status, the WaterGuard-FS repeats sending the SMS alarm message every four hours.
- When the batteries need to be replaced, the Mobeye WaterGuard-FS sends a 'low battery' SMS text message to the first telephone number (administrator).
- When an external power supply is used and a power failure occurs, the Mobeye WaterGuard-FS sends a 'power failure' SMS text message to the first telephone number. When the power is restored, the Mobeye WaterGuard-FS sends a 'power restored' SMS text message.

Chapter 5 describes how to influence the standard behaviour.

3. GETTING STARTED

To get started with the Mobeye WaterGuard-FS, at least the following steps need to be taken in the following order:

1. Insert the SIM card
2. Connect the water float sensor to input 1
3. Insert the batteries
4. Connect an external power supply (optionally)
5. Connect a sensor to the second input (optionally)
6. Programming when using the Mobeye SIM/Portal
 - a. Sign up in the Mobeye Internet Portal
 - b. Activate the SIM card
 - c. Enter the program mode
 - d. Activate the device in the Mobeye Internet Portal
 - e. Program the options and synchronise
7. Programming when using your own SIM card
 - a. Enter the program mode
 - b. Program the settings

Steps 1 to 4 are described in sections 3.1 up to 3.4.

Step 5 is described in chapter 4. Step 6 can be found in chapter 6.


3.1 INSERT THE SIM CARD

Open the enclosure by removing the 4 screws and insert the SIM card into the module. Push the black cover slightly outward to open the holder and close it afterwards.

When using the Mobeye SIM card:

The supplied SIM card has a PIN code protection, which means that it can only be used in the Mobeye device.

Note: do not place it in another device.

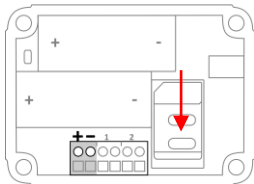

When using your own SIM card:

Before installing the SIM card should have PIN code "0000", or PIN code removed. (A PIN code can be changed or removed by putting the SIM card in to any mobile phone and entering the 'security' menu.)


NB: Make sure the SIM card is inserted before the batteries. If you replace a SIM card, first remove the batteries (and remove any other external power supply). The settings are stored in the device memory. The SIM card shall have the "normal" size and be suitable for 2G. It is advised to use an M2M SIM card.

3.2 INSERT THE BATTERIES

Insert the two batteries (CR123) in the module. Use the +/- indication for the correct placement. If you replace the batteries the settings will not be deleted, since they are stored in the device memory.

3.3 CONNECT THE WATER FLOAT SENSOR TO INPUT 1

Insert the 2 wires of the external float sensor through the hole of the enclosure to the inside part and next in the two connectors of input 1 (press on the green pins for connecting the wires). It does not matter which wire is connected to which connector. If necessary the wires can be extended up to 100 meter using appropriate wire material.

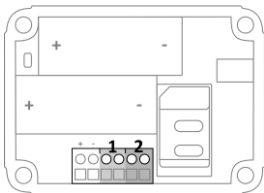

Mount the floater to a fixed place in horizontal position with the moving part in open status. Mount the sensor at the height where the presence of water should be detected. In case the floater should be closed in normal situation (and be opened after water detection), the input type need to be changed to NC (see paragraph 5.6).




3.4 CONNECT AN EXTERNAL POWER SUPPLY (OPTIONALLY)

Although the Mobeye WaterGuard-FS is designed to run on batteries, it is possible to use an external power supply. In this mode the module is always connected with the GSM network and therefore always in program mode. When the power fails, the batteries take over and a power failure alarm message is sent. The module continues operating albeit in the low power mode. This means the GSM module switches off and only establishes network connection when it needs to send an alarm notification, test message or low battery alert.

Connect the external power adapter (or any other regulated 12VDC power supply) to the power input of the connector (press on the green pins to connect the wires):

- V+ (black lead with white stripe) to “+”
- Ground (black lead) to “-“

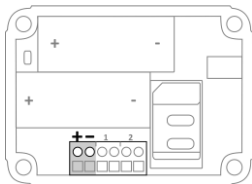


3.5 CONNECT A SENSOR TO THE SECOND INPUT (OPTIONALLY)

A second sensor can be connected to input 2.

Insert the 2 wires of the external sensor through the hole in the enclosure and insert them in the two connectors of input 2 (press on the green pins for connecting the wires). It does not matter which wire is connected to which connector.

As default the inputs are programmed as Normally Open (NO) contacts. This means the inputs are triggered if the input is closed for at least 1 second. In case the contact is Normally Closed (NC), please refer to paragraph 5.4. If you require the sensor to be activated for a shorter or longer period before triggering an alarm, refer to 5.7.

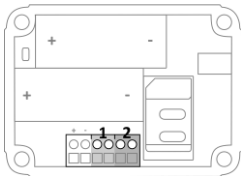

4. PROGRAMMING WHEN USING THE MOBEYE SIM AND PORTAL

4.1 SIGN UP IN THE MOBEYE INTERNET PORTAL

Go to www.mymobeye.com and sign up for a new account. Follow the instructions on the screen.



You will receive an e-mail to confirm the new account. After confirmation login on the portal.

If you do not receive this e-mail, please check your spam box or ask Mobeye (info@mobeye.com).

4.2 REGISTER THE MOBEYE SIM CARD

To activate the Mobeye SIM card in the Mobeye Internet Portal, choose 'activate SIM card' on the 'Add Device' screen.

A rectangular button with a thin black border and the text "Add Device" centered inside.

Fill in the SIM card number. This is the number written on the plastic SIM card below the barcode. You can take the entire number or only the last 8 digits.

A rectangular button with a thin black border and the text "Activate SIM card" centered inside.

The screen leads you through several pop-ups. If asked, choose the device type (search for "CM2300FS") and select the type of contract ("CM2300FS SIM + Portal Monitoring").

At the moment you accept the price and terms, you confirm the subscription. You will receive an invoice for the mentioned amount.

Before activating the device in the Mobeye Internet Portal, first prepare the unit. See next paragraphs to learn how to do this.

4.3 ENTER THE PROGRAM MODE

To activate the unit in the portal, the GSM module needs to be open and connected to the network.

In the situation that the WaterGuard-FS is connected to an external power supply, the unit is always in program mode.

 
A battery-operated Mobeye WaterGuard-FS switches to the program mode after pressing the on/off button for 5 seconds until the LED starts flashing. Alternatively the batteries are re-inserted.

While searching for the GSM network connection the outside LED flashes green and red, followed by blinking fast shortly. This process normally takes 10-30 seconds. As soon as the network has been established and the program mode has been reached the LED flashes 1 sec. on/1 sec. off (or stays on continuously in case the unit has been configured yet).

During 3 minutes the GSM module remains active, ready to be activated in the portal. In a battery-operated unit a time-out occurs after 3 minutes and the GSM module switches off in order to save the batteries. In this low power mode the LED flashes once per 3 seconds.

4.4 ACTIVATE THE DEVICE IN THE PORTAL

If the LED on the outside flashes once per second, you activate the device in the Mobeye Internet Portal by clicking 'Activate device', which is written behind the registered SIM card.



On the pop-up screen, enter the security code "1111" (factory code). The unit will receive a message from the portal and the data exchange is started. The next screen asks for a name and location for your device. These fields can be changed later.

Once the activation is completed, the new device is visible on the dashboard.



By clicking the name, the detail page will be opened.

4.5 CONFIGURATION AND SYNCHRONISATION

The device settings can be programmed in the Mobeye Internet Portal. In this way you prepare the settings, to be picked up by the device. Since the Mobeye device is leading in the communication between the portal and the device, the data synchronisation is done after:

- 1) any message to the portal (e.g. the regular test message, alarm, low batteries).
- 2) reconnecting power and reinserting batteries.
- 3) pressing the on/off button for 5 seconds.
- 4) in program mode: receiving the SMS command CODE SYNC (e.g. 1111 SYNC).

Once the device exchanges data with the portal, the LED quickly flashes green. A battery-operated unit will first blink red-green until it connects to the network.

4.6 BASICS OF THE MOBEYE INTERNET PORTAL

Dashboard

With multiple devices, the dashboard shows all devices, with the (alarm) messages in the last 24 hours, (missed) test messages and low battery status.

Select a device to go to the details of a specific device.

Status & History

The status block shows values that provide information about the status of the unit.

If the "Synchronized" status is set to "No", there are new settings or alarm numbers that still need to be transferred to the device.

The GSM status shows the network strength at the last communication session. If the value is lower than -95dB, consider another location for the device.

Click on the position icon to see the geographical location during the last report.

Note: this is an indication based on "cell-id".

The history displays all historical events. Click on "all events" to see the overview.

Device Settings

The device settings can be changed via the Mobeye Internet Portal. To do this, click on the "edit" icon and type in the security code (factory setting is "1111"). See chapter 5 for the description per setting.

After saving the new settings, they must be retrieved by the device (synchronized). See 4.5 for more information about synchronizing.

The device data contain the name and location of the device and can be changed here. These texts are mentioned in every text message and e-mail message to indicate the device. A free text is available as an internal comment field. This is not included in reports.

Alarm dispatch

In the block "Contacts for text and e-mail messages" you link the contact persons who receive alarm and service messages via text message and / or e-mail. Service messages can be warnings about missed test messages and low battery voltage.

To add a contact person, first create it as a contact. This can be done via the or in the main menu under the blue Contacts tab.

in the block "Alarm calls from device" the (max. 5) alarm numbers that are called directly from the unit are set. After saving, the alarm numbers must be retrieved by the device, i.e. synchronized. See 4.5 for more information about synchronizing.

Tips:

- Always insert a contact to receive service messages by e-mail.
- Allow text messages only after the test phase in order to save the SMS credits.

Message texts

The message texts are the event texts which are, in addition to the name and location, included in the SMS text messages and e-mails. These texts can be customized.

4.7 SWITCHING ON/OFF

After the previous steps the Mobeye WaterGuard-FS is ready for use. It is armed (switched on) automatically.

In order to switch off (disarm) the Mobeye WaterGuard-FS:

- Press the on/ off button at the upper side for 1 second. The green LED switches off to indicate the disarmed status.

In the disarmed status the Mobeye WaterGuard-FS will not send alarm notifications. The functions sending test messages and sending a 'low battery' message, are still active.

In order to switch on (arm) the Mobeye WaterGuard-FS:

- Press the on/ off button at the upper side for 1 second. The green LED blinks once every 3 seconds (battery-powered) or stays 'on' continuously (in case of an external power supply).

If powered externally (GSM is open), switching can be done via SMS commands:

SMS command to switch on:	CODE ARM
SMS command to switch off:	CODE DISARM
example:	1111 ARM

The status can be requested via SMS command CODE STATUS?.

4.8 CONFIRMATION OF THE ALARM MESSAGE

When the system is triggered it will send alarm notifications. First a message is sent to the portal (and forwarded from there), followed by a phone call. When you pick up the phone, you will hear beeps. It is possible to acknowledge the phone call by answering the phone and pressing any key. The other alarm numbers will not be called afterwards. This works for most telephones.

4.9 SYSTEM RESET

To reset a Mobeye WaterGuard-FS two steps are necessary, in following sequence:

1. Delete the Mobeye WaterGuard-FS from the Mobeye Internet Portal
2. Reset the Mobeye WaterGuard-FS

1. To delete the Mobeye WaterGuard-FS from the Mobeye Internet Portal

Go to "Device Settings" and click on the delete icon in the "Device" block. Then confirm your choice.

2. To reset the Mobeye WaterGuard-FS to its factory settings

1. Remove the batteries (and external power supply).
2. Press the outside button while reinserting the batteries. Keep it pressed for (about) another 5 seconds.
3. Release the button immediately after the LED starts to flash.
4. If relevant, connect the external power supply.

After a successful reset, the status LED will blink green to indicate that the module is not configured. The security code is back to factory settings as well.

The SIM card is now disconnected and is visible on the "Add device" screen. The SIM card can be used again in another (or the same) Mobeye device in combination with the portal.

5. POSSIBLE SETTINGS

The Mobeye WaterGuard-FS has many setting options that influence the behaviour of the module. If connected on the Mobeye Internet Portal, the settings are prepared in the portal (see chapter 4). If your own SIM card is used, programming is done via SMS commands (see chapter 7).

5.1 ALARM PHONE NUMBERS

In the event of an alarm, the Mobeye WaterGuard-FS can call 5 telephone numbers (TEL1... TEL5). It is possible to confirm a call by picking up the telephone and pressing any key. The following numbers will not be called.

When using your own SIM card, it is mandatory to set at least one number (on TEL1). The TEL1 ... TEL5 are then used for telephone calls and / or text messages from the unit.

This is not mandatory when using the Mobeye Internet Portal. If no telephone numbers have been entered, the notifications will only be sent to the portal and forwarded by SMS and / or e-mail from there.

Note: the (unlimited number of) contacts who receive SMS / e-mail may be different from the numbers programmed on TEL1 ... TEL5.

5.2 CALL ON/OFF

Even if the alarm telephone numbers are set in the options, the calling process can be suppressed. By turning off the CALL, the unit will only send the notification via textual messages. The default value is set to "ON".

5.3 SMS ON/OFF

This setting is only relevant when using your own SIM card: the Mobeye WaterGuard-FS alerts after an alarm on the inputs with a call and an SMS. It is possible to turn off the SMS (OFF). As a factory setting, the SMS is set to "ON".

5.4 ALARM DELAY TIME

The input delay time defines the time that the input is triggered before an alarm is initiated. If the input returns to the non-alarm status within the delay time, no alarm is sent. The time can be set between 0 and 999 seconds. As default, the input delay time is set to 1 second.

5.5 ALARM REPEAT TIME

In order to emphasize the urgency of the alarm messages, all alarms can be repeated. As long as the input has not returned to the inactive status, the textual messages (no phone calls) will be repeated after the 'alarm repeat time'. The repeat interval can be set between 0 and 24 hours. As default the alarm repeat time is set to 4 hours.

5.6 INPUT TYPE

The input type defines the character of the inputs IN1 and IN2. This can be Normally Open (NO) or Normally Closed (NC). If an input is set to "NO", the alarm will be triggered as soon as the terminals of the input are closed. If the input is set to NC, the alarm is triggered when the connection between the input terminals is broken. The default input type is set to "NO".

5.7 EXIT DELAY TIME

The exit delay time defines the time between the moment of switching on the module – while the input is active – and the moment the module starts sending the first alarm message. Example: the module has been installed in a cabinet where a door magnet contact is connected to the input. The exit delay time is the time between switching on the module and closing the cabinet's door. Only after this time has exceeded, alarm messages will be sent. The time can be set between 0 and 999 seconds. As default, the exit delay time is set to 0 second.

5.8 INACTIVE TIME

The “inactive time” defines the time an input is not active after an activation. During the inactive time, no new alarm message will be sent. Only when the input returned to the non-alarm status, gets activated again and remains active, an alarm will be sent yet after the inactive time. If the time is set to “0” (minutes), the input will be active again immediately after returning to the non-alarm status. The time can be set between 0 and 60 minutes. As default, the inactive time is set to “0”.

5.9 POWER FAILURE DELAY TIME

If the Mobeye WaterGuard-FS is powered externally and the power fails it can notify the contact person(s). The power failure delay time defines the time between the initial power failure and the alarm notification. If the power is restored within the delay time, no alarm is sent. The time can be set between 0 and 999 minutes. As default, the delay time is set to “0”.

5.10 POWER FAILURE MESSAGE

If the Mobeye WaterGuard-FS is powered externally and the power fails, it is able to make phone calls and/or send textual messages. There are three configuration options: Alert, Alarm, Off.

	Mobeye SIM/Portal	Own SIM
Alert	Message via portal	SMS to TEL1
Alarm	Call to TEL1...TEL5 and message via portal	SMS + call to TEL1...TEL5
Off	No message	No message

The default setting for the ‘power failure message’ is set to “ALERT”.

5.11 BUTTONLOCK

It can be useful to lock the on/off button to prevent the unit from being switched off unintentionally. As default the buttonlock is unlocked (so, the button is enabled). To disable the button, the buttonlock needs to be switched to "ON".

5.12 LOW POWER MODE

A battery-powered Mobeye WaterGuard-FS has the GSM module switched off in stand-by mode. It only switches on if it has to send a message. An externally powered unit always keeps the GSM module open (as factory default). When using the "low power mode" an externally powered unit will also keep the GSM module closed as much as possible, to minimize the power consumption. To achieve this, the LOWPOWER shall be set to "ON". In the low power mode, the presence of the external power source will still be monitored.

5.13 TEST MESSAGE

When using the Mobeye Internet Portal: The Mobeye WaterGuard-FS can send regular test messages (*keep alive*) to the Mobeye Internet Portal, to ensure the proper functioning of the unit. The test message will also be sent if the unit is disarmed. The Mobeye Internet Portal expects the test message and checks the timely receipt. The monitoring of the test messages follows the 'management by exception' rule: only if the message was not received, the 'service' contacts will receive a notification.

The timing of the test message can be programmed. Since new settings (options) will be synchronised after the test message, setting a specific time of the test message can help the process of remote programming. Example: if you force a daily test message at 17.30 hrs, you can prepare new settings and be sure they are loaded into the device before the evening.

The interval between the test messages can be set between 0 days (no test message) and 30 days. The default test interval is set to "7" (weekly test message).

When using your own SIM card: The Mobeye WaterGuard-FS can send regular test SMS messages (*keep alive*) to the first phone number (TEL1), to ensure the proper functioning of the unit. The test message function is only active if the unit is armed. The timing of the test message is determined by the time of programming. The test

time can also be programmed. The interval between the test messages can be set between 0 days (no test message) and 30 days. The default test interval is set to "0" (no test message).

6. PROGRAMMING WHEN USING OWN SIM CARD

If your own SIM card is used, programming proceeds via SMS commands. The GSM module requires network connection during programming. If the Mobeye WaterGuard-FS runs entirely on batteries, it must first be put into programming mode.

6.1 PROGRAM MODE

To program the unit with SMS commands, the GSM module needs to be open and connected to the network.

In the situation that the WaterGuard-FS is connected to an external power supply, it has continuous network connection and the unit is permanently in program mode.

A battery-operated Mobeye WaterGuard-FS switches to the program mode after pressing the on/off button for 5 seconds until the LED starts flashing. Alternatively the batteries are re-inserted.

While searching for the GSM network connection the outside LED flashes green and red, followed by blinking fast shortly. This process normally takes 10-30 seconds. As soon as the network has been established and the program mode has been reached the LED flashes 1 sec. on/1 sec. off (or stays on continuously in case the unit has been configured yet).

During 3 minutes the GSM module remains active, ready to receive SMS commands. In a battery-operated unit a time-out occurs if no correct command is received for 3 minutes, the GSM module switches off in order to save the batteries. In this low power mode the LED flashes once per 3 seconds.

6.2 PROGRAM AT LEAST ONE TELEPHONE NUMBER

The Mobeye WaterGuard-FS is able to send messages up to 5 telephone numbers. The first telephone number (TEL1) belongs to the administrator. Technical messages (such as *battery low*) are sent to the administrator only. Without the administrator's phone number, the Mobeye WaterGuard-FS cannot function.

When the WaterGuard-FS is in initial (factory) status and the batteries are inserted (so the LED is flashing), the administrator's number is programmed by calling the

telephone number of the Mobeye WaterGuard-FS using the administrator's phone. The unit will recognize this number and store it as administrator (TEL1). The administrator will receive a confirmation SMS text message including the security code. This code is needed to program the other settings in the unit.

NB: For this way of programming the number recognition in the administrator's phone must be 'on'. To program or change the administrator's number by SMS command, please refer to the next section.

6.3 PROGRAMMING THE SETTINGS BY SMS

Using your own SIM card, all settings are programmed in by SMS text messages:

1. Make sure the WaterGuard-FS is in program mode (please refer to 6.1).
2. Send an SMS text message with the (security) code and the command.
3. The green LED blinks 3 times to indicate the successful configuration. In case of an incorrect command, the red LED flashes 5 times.

SMS messages have the following content: **CODE COMMAND:OPTION**

Example: **1111 TEL1:+44772345678**

- CODE stands for the security code, factory setting is 1111.
- Do not forget the space character between (security) code and command.
- The commands are case insensitive.
- Several commands may be combined in one SMS message (with a maximum of 160 characters) by placing a # between the commands.

CODE COMMAND:OPTION#COMMAND:OPTION#COMMAND:OPTION

- All settings are saved and remain saved, even when the unit has no power or the batteries are removed.

In chapter 5 the options are explained.

In chapter 7.1 all possible SMS commands are listed.

7. LIST OF SMS COMMANDS FOR PROGRAMMING WITH OWN SIM

7.1 LIST OF SMS COMMANDS

When using your own SIM card, the settings are programmed via SMS commands. See chapter 6 for the programming method and chapter 5 for an explanation per setting. The commands are case insensitive.

Setting	SMS Command	Options	Default value
Change security code	INSTCODE:	0000...9999	1111
Set telephone number for alarm messages	TEL1: ... TEL5:		Empty
Delete telephone number	DEL1 ... DEL5		
Identification text	NAME:	20 characters	Mobeye
Call on/off	CALL:	ON, OFF	ON
SMS on/off	SMS:	ON, OFF	ON
Input type water sensor	TYPEIN1:	NO, NC	NO
Input type input 2	TYPEIN2:	NO, NC	NO
Exit delay	DELAYEXIT:	0...999 (sec)	0
Delay on water sensor	DELAY1:	0...999 (sec)	1
Delay on input 2	DELAY2:	0...999 (sec)	1
Inactive time water sensor	INACTIVEIN1:	0...60 (min)	0
Inactive time input 2	INACTIVEIN2:	0...60 (min)	0
Alarm repeat time	REPEAT:	0...24 (hrs)	4
Alarm text water sensor	TEXT1:	20 characters	Water alarm
Alarm text water OK	TEXT2:	20 characters	Water OK
Alarm text input 2	TEXT3:	20 characters	Alarm 2
Alarm text power failure	TEXT4:	20 characters	Power failure
Alarm text power restore	TEXT5:	20 characters	Power restored
Power failure delay time	DELAYPOW:	0...999 (min)	0
Power message	POWERMESSAGE:	OFF,ALERT,ALARM	ALERT

Setting	SMS Command	Options	Default value
Actual time	TIME:	hhmm	Empty
Actual date	DATE:	yyyymmdd	Empty
Use of on/off button	BUTTONLOCK:	ON (button locked) OFF (unlocked)	OFF
Low power status	LOWPOWER:	ON, OFF	OFF
Interval 'test SMS'	TEST:	0...30 (days)	0
Time test message	TESTTIME:	hhmm	

Examples:

Set phone number 1: 1111 TEL1:0712345678

Delete phone number 1: 1111 del1

Be aware of the space between "1111" and the command.

7.2 SWITCHING ON/OFF

After the previous steps the Mobeye WaterGuard-FS is ready for use. It is armed (switched on) automatically.

In order to switch off (disarm) the Mobeye WaterGuard-FS:

- Press the on/ off button at the upper side for 1 second. The green LED switches off to indicate the disarmed status.

In the disarmed status the Mobeye WaterGuard-FS will not send alarm notifications. The function sending a 'low battery' message is still active.

In order to switch on (arm) the Mobeye WaterGuard-FS:

- Press the on/ off button at the upper side for 1 second. The green LED blinks once every 3 seconds (battery-powered) or stays 'on' continuously (in case of an external power supply).

If powered externally (GSM is open), switching can be done via SMS commands:

SMS command to switch on: CODE ARM

SMS command to switch off: CODE DISARM

example: 1111 ARM

The status can be requested via SMS command CODE STATUS? (1111 CODE?).

7.3 CONFIRMATION OF THE ALARM MESSAGE

When the system is triggered it will send alarm notifications. First an SMS text message is sent to all programmed alarm numbers, followed by a phone call. When you pick up the phone, you will hear beeps. It is possible to acknowledge the phone call by answering the phone and pressing any key. The other alarm numbers will not be called afterwards. This works for most telephones.

By switching off the SMS function the system will only call. This prevents the other numbers being notified by SMS.

7.4 SYSTEM RESET

To reset the Mobeye WaterGuard-FS to its factory settings:

1. Remove the batteries (and external power supply).
2. Press the outside button while reinserting the batteries. Keep it pressed for (about) another 5 seconds.
3. Release the button immediately after the LED starts to flash.
4. If relevant, connect the external power supply.

After a successful reset, the status LED on the keypad will blink green to indicate that the module is not configured. The security code is back to factory settings as well.

7.5 SMS REPORTS WHEN USING OWN SIM CARD

Several lists and status reports can be retrieved by sending an SMS text message to the Mobeye WaterGuard-FS, from any telephone number. Before sending the request, make sure the unit is in the program mode (please refer to 6.1).

Upon sending the command, the Mobeye WaterGuard-FS returns an SMS text message to the originator of the request. The commands are case insensitive.

STATUS REQUEST

The status can be requested by sending following SMS text message. The status includes the armed/disarmed status, status of the inputs, power and batteries.

SMS command status request: **STATUS?**
 example: 1111 STATUS?

LIST OF SETTINGS

The settings can be requested by sending following SMS text message:

SMS command list basic settings: **SET?**
SMS command list advanced settings: **SETA?**
SMS command list of texts: **TEXT?**
 example: 1111 SET?

LIST OF PHONE NUMBERS

The list of telephone numbers can be requested by sending following SMS text message:

SMS command list of phone numbers: **CALL?**
 example: 1111 CALL?

GSM SIGNAL STRENGTH

The signal strength of the used mobile network can be requested. If the network is weak, it is advised to use a SIM card of another network provider or an external GSM antenna (a Mobeye accessory). The GSM signal strength can be requested by sending following SMS text message:

SMS command request GSM signal: **NETWORK?**
 example: 1111 NETWORK?

7.6 TECHNICAL MESSAGES

In the event of technical issues the administrator receives an SMS message. Possible technical messages are:

Message	Reason
Low batteries, external power supply OK	Power is available, batteries need to be replaced.
No external power supply, batteries OK	No external power supply, batteries are able to take over operation in low power mode.
Low batteries, no external power supply	No external power supply, batteries need to be replaced.
External power supply OK, batteries OK	The external power is restored (or the adapter is plugged in a socket), batteries do not need to be replaced.
(delayed message)	If (delayed message) is added to the SMS text messages, the message couldn't be sent earlier, due to a SIM card failure or GSM network failure.
Batteries too low. Module shutting down.	The module has shut down due to low voltage. Replace the batteries or connect the power supply to restart the unit.
Module restarted. Power supply [status]. Batteries [status].	The module has been able to restart after a shutdown.

When receiving one of the above mentioned technical messages, please take appropriate action as soon as possible. During the battery replacement, the SIM card does not have to be removed.

8. STATUS FEEDBACK

LED pattern	Status	Required action
Blinking green, 1 second on / 1 second off	Module not configured	Configure at least one telephone number.
1 green flash every 3 seconds	Module is switched on, powered by batteries	No action required.
Green LED stays on continuously	Module is switched on, powered by an external source	No action required.
Flashing red/ green every second	Module establishes network connection	Wait until the network connection is established.
2 flashes red, every 3 seconds	No GSM connection	Try the SIM card in any mobile telephone; replace SIM card using other telecom provider; try the module at another location.
3 flashes red, every 3 seconds	No valid SIM card or wrong PIN	Try the SIM card in any mobile telephone; remove PIN code; check credit; replace SIM card.
Blinking 3 times green	Successful programming action	No action required.
Blinking 5 times red	Faulty programming action	Check SMS command.
4 red flashes every 3 seconds	Low batteries	Replace both batteries.
Quickly flashing green	Module exchanges data with portal	No action required

Technical specifications

GSM	: Quad band EGSM, 850/900/1800/1900 MHz
Batteries	: 2* CR123 (lithium) recommended: Varta, Panasonic and Energizer (please do not use Duracell or Philips)
Battery life in normal mode	: > 1 year (battery operated) > 3 years (external power supply)
Ext. power connection	: 12 VDC (+/- 2 VDC) / min. 500 mA (optional)
Power consumption low power	: ca. 50 μ A stand-by / max. ca. 500 mA
Power consumption 12V	: ca. 50 mA stand-by / max. ca. 500 mA
Dimensions	: 80 x 60 x 40 mm
Ambient temperature	: -10 °C until +50 °C

This manual is published by Mobeye®.

All rights, the translation included are reserved. Any reproduction, either photocopy, microfilm or saved in an automated data dictionary, only after written approval of the Publisher. Reprinting, even in summary, is prohibited. This user manual meets the technical requirements at the moment of printing. Changes in technology and equipment are reserved.

© Copyright 2019 by Mobeye, version CM2300FSC-EN191111



Declaration of Conformity

Herewith we, Mobeye, declare that the

Mobeye CM21 telemetry module

And the derived products

CM2000, CM2100, CM2200, CM2300, CM2300-FS, CM2410, CM2500, CM2600,
CML2015, CML2025, CML2055, CML2255, CML2275, CML2285, CMVXL-R

are in compliance with the essential requirements of the following European standards / EU Directives:

Directive 73/23/EEC (low voltage directive)

Directive IEC/EN 50130 (Electromagnetic compatibility)

Directive 2014/53/EU (RED)

The conformity with the essential requirements set out in Art.3 of the 2014/53/EU has been demonstrated against the following harmonized standards:

EN 60950-1 : 2006 + A11 : 2009 + A1 : 2010 + A12 : 2011 + A2 : 2013
EN 62311 : 2008
EN 301 489-1 V2.1.1, Draft EN 301 489-52 V1.1.0
EN 301 511 V12.5.1

Mobeye
Poeldonkweg 5
5216 JX 's-Hertogenbosch
The Netherlands

Name: Jack van de Vijver
Position: General Manager
Signature: 

Date: 12 July 2017



