



## **Installation manual**

**Mobeye MS100E**

**GSM**

**Measure, Control and Alarm module**



## **Attention! Very important**

This user manual contains important guidelines for the installation and usage of the Mobeye MS100E. Please read these thoroughly before you start using the Mobeye MS100E!

In case of damage caused by disregarding the guidelines, the warranty becomes void. The user must regularly check the proper functioning of the Mobeye MS100E. The manufacturer cannot be held liable for any damage or loss caused by any incorrect use or incorrect functioning of the Mobeye MS100E.

### **Safety guidelines**

- The permitted ambient temperature during operation may not be exceeded (not lower than -10°C and not higher than 55°C).
- The device is intended for use in dry and clean places.
- Protect the device from moisture, heat and water splashing. Not intended for external use.
- The guidelines for the battery usage must be regarded.
- Do not expose the device to strong vibrations.
- Do not let it fall from height.
- Do not use in an environment where any inflammable gases, vapours or dust are present or could be present.
- Repair of the device may only be carried out by people, trained for Mobeye® repair.
- If the device must be repaired, only original replacement components may be used. The use of different parts may lead to damage of the Mobeye MS100E.

### **Use in accordance with the regulations**

The purpose of this device in accordance with the regulations is the generation of SMS text messages and telephone calls after the activation of one of the inputs, or after an internal trigger; switching the outputs after an alarm or via incoming call/SMS. Other uses are not permitted.

### **Battery recycling**

The lithium-ion battery, which is an accessory for the Mobeye MS100E can be recycled. Please take empty batteries to a nearest collection point.



# Table of Content


<b>1.</b>	<b>Introduction</b>	<b>2</b>
<b>2.</b>	<b>To get ready in seven steps</b>	<b>3</b>
2.1	Place the SIM Card	3
2.2	Connect a sensor	3
2.3	Connect the power supply	3
2.4	Connect the back-up battery	4
2.5	Program the phone numbers	4
2.6	Check the settings	5
2.7	Alarm message confirmation	5
2.8	Controlling the outputs	5
<b>3.</b>	<b>Sensors and devices</b>	<b>6</b>
<b>4.</b>	<b>Configuration method</b>	<b>7</b>
4.1	Program mode	7
4.2	How to program by SMS	7
<b>5.</b>	<b>Configuration possibilities</b>	<b>8</b>
5.1	Installation code	8
5.2	Telephone numbers	8
5.3	SMS ON/OFF	8
5.4	CALL ON/OFF	8
5.5	Interval test message	8
5.6	Set actual time and date	8
5.7	Automatic time-based arm/disarm	8
5.8	identification text	9
5.9	Alarm text	9
5.10	Input type	9
5.11	Input delay time	9
5.12	Inactive time	9
5.13	Power failure delay time	9
5.14	Authorisations and remote control	10
5.15	Unauthorised switching of outputs	10
5.16	Duration of outputs: Switch or pulse times	10
5.17	Initial state output	10
5.18	Reset to factory settings	10
<b>6.</b>	<b>Action rules</b>	<b>11</b>
6.1	Pre-programmed action rules	11
6.2	Triggers and reactions	11
6.3	Programming action rules	12
6.4	Time-based action rules	12
6.5	List of programmed action rules	13
6.6	Delete action rules	13
<b>7.</b>	<b>Complete list of settings</b>	<b>14</b>
<b>8.</b>	<b>Reports and lists</b>	<b>16</b>
8.1	Status request	16
8.2	List of settings	16
8.3	Authorisation list	16
8.4	Test GSM network strength	16
<b>9.</b>	<b>Issue solving and technical data</b>	<b>18</b>

## 1. INTRODUCTION

The Mobeye MS100E is an easy to install measure, control and alarm module that will send alerts using the built-in GSM communication module. It has inputs for sensors and signals. The Mobeye MS100E can also switch external devices that are connected (e.g. by SMS text message). To use the Mobeye MS100E you will need a SIM-card. This can be a prepaid or post-paid card.

The Mobeye MS100E has following features:

- In case one of the inputs is activated by a sensor, the Mobeye MS100E sends an alarm SMS text message and calls the phone numbers as programmed. The SMS message contains the text 'Mobeye alarm 1' or 'Mobeye alarm 2'.
- As soon as the inputs leave the alarm status, an SMS text message is sent to the set telephone numbers containing the text such as 'Mobeye Input 1 OK' or 'Mobeye Input 2 OK'.
- If the sensor and/or the input remain in the alarm status, the Mobeye MS100E repeats sending the SMS alarm message every four hours.
- The outputs can be switched by an incoming SMS command from an authorised telephone number.
- If a rechargeable external battery is placed and a power failure occurs, the Mobeye MS100E sends a 'power failure' SMS text message and calls the phone numbers as programmed by the user. When the power is restored, the Mobeye MS100E sends a 'power restored' SMS text message to the numbers.

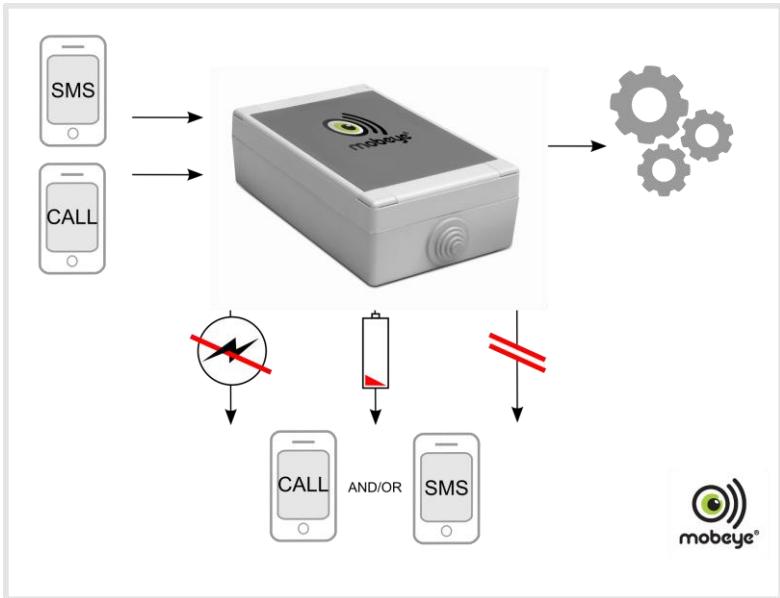

## 2. TO GET READY IN SEVEN STEPS

To get started with the Mobeye MS100E seven easy steps are needed.


1. Place the SIM card
2. Connect a sensor to the input
3. Connect the power supply
4. Connect the back-up battery (optionally)
5. Enter at least one phone number
6. Check the settings

### 2.1 PLACE THE SIM CARD

To use the Mobeye MS100E a SIM card from any network is needed. On this SIM card, the PIN code security needs to be disabled or 0000. If you have a SIM card with PIN code, you can disable or change this using any mobile phone and change the PIN code security. Please consult the manual for that mobile phone for the procedure.

The SIM card needs to be inserted before the power is connected. When using a prepaid SIM card, take note of the available credit. Additionally it is wise to set a recurrent test message so the card will be used at least once a month.


- Open the back cover.
- Insert the SIM card in the holder. For opening/closing, move the cover slightly.

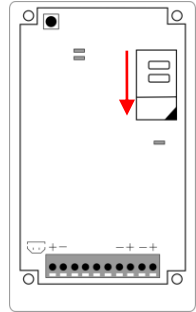

### 2.2 CONNECT A SENSOR

Open the hole in the enclosure and insert the 2 wires of an external sensor through the hole of the enclosure to the inside part and next in the two connectors of input 1 (press the orange pins for connecting the wires). It does not matter which wire is connected to which connector. If necessary the wires can be extended using appropriate wire material.

If the sensor should be closed in normal situation (and be opened in the event of an alarm), the input type should be changed (please refer to paragraph 5.10).

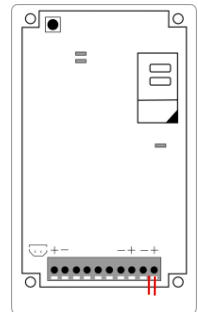


### 2.3 CONNECT THE POWER SUPPLY

The Mobeye MS100E is designed to run on an external power supply (9-32VDC). The module will always be in connection with the GSM network. This gives following features: possibility to receive power failure messages (using a back-up battery) and the possibility to perform remote actions, such as arm/disarm, switch the outputs, ask status reports and to program it via SMS-commands.

Connect the external power adapter (or any other regulated 9-32VDC power supply) to the power input of the connector (press on the orange pins for connecting the wires):

- V+ (black lead with white stripe) to “+”
- Ground (black lead) to “-“

If using the Mobeye mains adapter (Mobeye article 10027):  
The black wire with the white line is “+”, the other black wire is “-“.

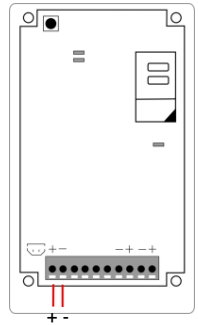

After inserting the SIM card and connecting the power, the Mobeye MS100E will perform a self test taking 1 minute. During the test, the light is red. If the light is flashing red, a problem with the SIM card is detected. A reason could be no SIM card was placed, or the PIN code security of the SIM card was not disabled.


Using external power, the module is always in connection with the GSM network and therefore in program mode.

#### 2.4 CONNECT THE BACK-UP BATTERY

For back-up power, in the situation that the external power was cut, a rechargeable Mobeye battery can be connected.

Attach the terminal of the battery to the white connector. The battery can be fixed with tie wraps or Velcro.

If the power falls out, the unit will keep sits functions and a power failure message can be sent. The GSM module remains open and the sensor inputs remain active. The back-up battery is able to power the module for at least 24 hours.

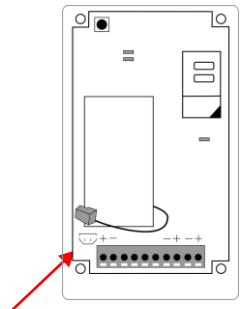

Close the Mobeye MS100E using the 4 screws.

#### 2.5 PROGRAM THE PHONE NUMBERS

The Mobeye MS100E is able to send messages up to 5 telephone numbers. The first telephone number (TEL1) belongs to the administrator. Technical messages (such as battery low) are sent to the administrator only. Without the administrators' phone number, the MS100E cannot function.

When the MS100E is in initial (factory) status (so the LED is flashing green), the administrators' number is programmed by calling the telephone number of the Mobeye MS100E using the administrators' phone. The unit will recognize this number and store it as administrator (TEL1). The administrator will receive a confirmation SMS text message including the security code. This code is needed to program the other settings in the unit.

NB: For this way of programming the number recognition in the administrator's phone must be 'on'. To program or change the administrators' number by SMS command, please refer to 4.2.

A confirmation melody is played. The Mobeye MS100E is ready to use.



## 2.6 CHECK THE SETTINGS

The settings can be sent to the programmed telephone number as SMS text message by sending a request to the unit. In this way you also check the correct working of the SIM card.

Upon sending the command, the Mobeye MS100E returns an SMS text message to the originator of the request.

SMS command list settings:	<b>CODE SET?</b>
Example (code 1111 is factory default):	1111 SET?

Within ca. 30 seconds the programmed phone number will receive the list with settings.

## 2.7 ALARM MESSAGE CONFIRMATION

When the sensor of the system is activated, it will send an alarm notification. First an SMS text message is sent to all programmed alarm numbers; next a phone call is made to the numbers. When you answer the phone, a beep tone is heard.

### Confirm using "1"

It is possible to confirm the phone call by answering the phone and pressing "1". The other alarm numbers will not be called afterwards.

## 2.8 CONTROLLING THE OUTPUTS

The relay outputs can be switched in two ways:


1. Automatically after an alarm (see 6.1)
2. After an incoming call or SMS text message from an authorised telephone number (or, in case this option was set, unauthorised) (see 5.14 and 5.15).  
If an output pulse time was set, the relay outputs will switch back automatically. If the pulse time was set to "0", they shall be switched back manually (see 5.16).

### 3. SENSORS AND DEVICES

Several external sensors can be connected to the two inputs. The Mobeye MS100E can also switch external devices connected to it via the outputs after receiving an SMS command (or phone call).

The Mobeye MS100E has a 9-32V power input for connection to an external power source.

Please find below the architecture of the main unit.

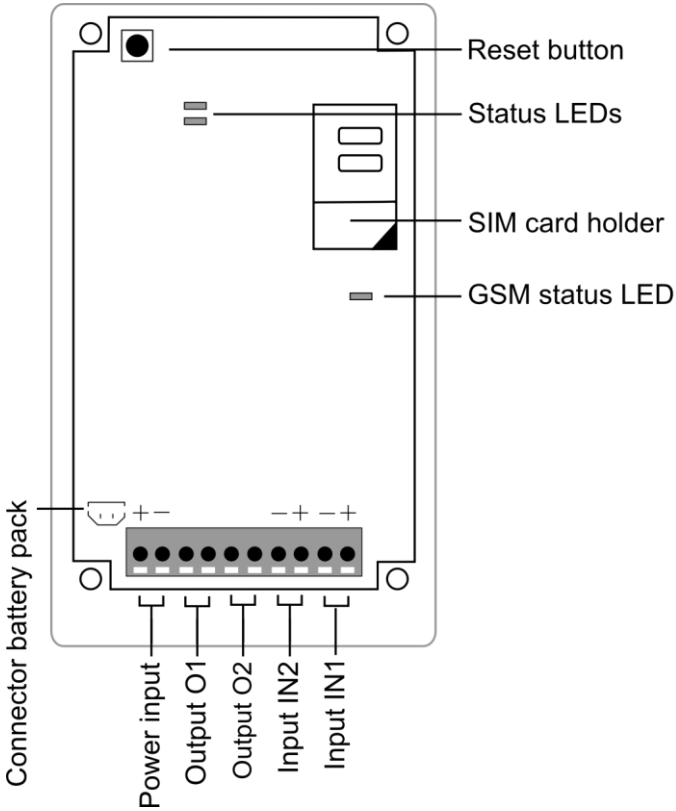

#### Inputs

External sensors can be connected to the inputs. Upon closing (or opening) an input, the Mobeye MS100E will send an alarm message to the set alarm numbers (factory default: SMS and call).

#### Outputs

The Mobeye MS100E has two outputs (O1 and O2). These relay outputs can switch external devices. The maximum load is 2A/30V per output. They can be switched after an alarm or by remote control (see 5.14).

## 4. CONFIGURATION METHOD

The settings in the Mobeye MS100E can be adjusted by SMS commands. All settings are stored and will be kept in the unit, even in case the power supplies are removed.

### 4.1 PROGRAM MODE

As soon as the unit is powered and finished the start-up, the Mobeye MS100E in program mode and ready to receive SMS commands.

### 4.2 HOW TO PROGRAM BY SMS


- Be sure the unit has external power and the GSM has network connection
- Send an SMS message with following content:


**CODE COMMAND:OPTION**

- The CODE stands for the installation code. Factory setting is "1111".
- Do not forget the space between CODE and COMMAND.
- The complete scheme with SMS commands is listed chapter 7.
- The commands are case sensitive.
- Several commands may be combined in one SMS message (with a maximum of 160 characters) by placing a # between the commands.

**CODE COMMAND:OPTION#COMMAND:OPTION#COMMAND:OPTION**

A confirmation melody is played to indicate a correct command. In the event of an incorrect command, a beep is heard.

 **Example:** To program a telephone number at memory position 2:  
1111 TEL2:+4934578692

 **Example:** To set the SMS to OFF (just call):  
1111 CALLALARM:OFF

Or: both commands in one message:

 **Example:**  
1111 TEL2:+4934578692#CALLALARM:OFF

## **5. CONFIGURATION POSSIBILITIES**

This chapter describes the possible settings in the Mobeye MS100E.

### **5.1 INSTALLATION CODE**

The installation code is the 4-digit code for switching on/off and programming the settings or activating the special functions. Factory default is "1111". It is possible to change the code to any 4-digit number. Please change the code to make the unit more secure.

### **5.2 TELEPHONE NUMBERS**

Up to five telephone numbers can be programmed in to the Mobeye MS100E. In the event of an alarm the Mobeye MS100E first sends an SMS text message to all numbers, next they are called. It is possible to confirm the call, after which the other numbers will not be called anymore.

Note: the first telephone number is required, the others are optional.

### **5.3 SMS ON/OFF**

By default, the Mobeye MS100E sends alarm notifications via text message and calls to the preset contact persons. By turning off the SMS, the unit will only call after the sensors send an alarm.

### **5.4 CALL ON/OFF**

By default, the Mobeye MS100E sends alarm notifications via text message and calls to the preset contact persons. By turning off the CALL, the unit will only send an SMS text message as alarm notification. It is not possible to switch off both the SMS and the call.

### **5.5 INTERVAL TEST MESSAGE**

The Mobeye MS100E can send test messages. Through these 'keep alive' reports you will be informed about the status of your Mobeye MS100E. You can set the interval between the test reports. This is adjustable between 0 (no test reported) and 30 (every 30 days a test message). Note when MS100E is battery-operated: the interval of 1 day will result in a daily test message; the exact time between the messages will be about 24 hours.

The smaller the interval between the test reports, the shorter is the battery life. The test message only works if the system is on.

### **5.6 SET ACTUAL TIME AND DATE**

If the system is to be armed automatically, the internal clock time needs to be correct. Some Telecom providers offer this in the network, to be synchronised by the Mobeye MS100E during the start-up and after sending test messages. It is possible to set the time and date manually. To view the clock time, send a list of the settings to the first programmed phone number (CODE SET?).

### **5.7 AUTOMATIC TIME-BASED ARM/DISARM**

The MS100E can be armed and/or disarmed based on a daily time schedule. The first telephone number needs to be set before the arming and/or disarming time can be set.

## 5.8 IDENTIFICATION TEXT

It is possible to add a standard identification text (NAME) to all messages sent out by the Mobeye MS100E. The alarm messages are a combination of the name and the alarm text. A user defined identification has a length of maximum 20 characters. The default identification text is 'Mobeye'.

## 5.9 ALARM TEXT

Custom alarm texts can be programmed. These texts have a maximum length of 20 characters.

The following texts are programmed as factory default:

Power failure	TEXT2: power failure
Power restored	TEXT3: power restored
Triggered input 1	TEXT4: alarm 1
Triggered input 2	TEXT5: alarm 2
Restored input 1	TEXT6: Input 1 restored
Restored input 2	TEXT7: Input 2 restored

## 5.10 INPUT TYPE

The input type defines the character of the inputs IN1 and IN2. This can be Normally Open (NO) or Normally Closed (NC). If an input is set to NO, the alarm will be triggered as soon as the terminals of the input are closed. If the input is set to NC, the alarm is triggered if the connection between the input terminals is broken.

The default input type is set to NO.

## 5.11 INPUT DELAY TIME

The input delay time defines the time that the inputs are triggered before an alarm is initiated. If the input returns to the non-alarm status within the delay time, no alarm is sent. The delay time can be set between 0 and 999 seconds.

As default, the input delay time is set to 1 second.

## 5.12 INACTIVE TIME

The "inactive time" defines the time the movement sensor, input 1 or input 2 is not active after an activation. If the time is set to "0" (minutes), the input is active again immediately after returning to the non-alarm status. If the time is set to e.g. 30 minutes, the input remains inactive for the first 30 minutes. If the input is again (or still) activated after these 30 minutes, a new alarm message is sent. The inactive time can be set between 0 and 60 minutes.

As default, the inactive time is set to "5" for all inputs.

## 5.13 POWER FAILURE DELAY TIME

The power failure delay time defines the time that the power fails before an alarm is initiated. If the power is restored within the delay time, no alarm is sent. The delay time can be set between 0 and 60 minutes. As default, the delay time is set to 1. Take care that a back-up battery needs to be placed in order to receive a power failure alarm message.

## 5.14 AUTHORISATIONS AND REMOTE CONTROL

By sending SMS commands remote control actions are possible, such as arming, disarming and switching the outputs. As prerequisite for remote control the 'controlling telephone number' needs to be authorised. A maximum of fifty numbers can be authorised via SMS command. If it is not clear what memory positions are available, it is possible to add a new number by the SMS command 'ADDTELA'. The new number takes the first free position.

To receive a list with the authorised numbers, please refer to 8.3.

SMS-commands for remote control (no code is necessary, numbers need to be authorised):

Arm:	ARM
Disarm:	DISARM
Switch on output 1:	O1ON
Switch off output 1:	O1OFF
Switch on output 2:	O2ON
Switch off output 2:	O2OFF

## 5.15 UNAUTHORISED SWITCHING OF OUTPUTS

Although the Mobeye MS100E is designed to only switch the outputs by an incoming SMS (or call, see chapter 6) from an authorized phone, there is also an option to let them be switched by any incoming call/SMS, without being authorised. To disable the need for authorised numbers, the 'authorization' option can be set to OFF. Default is ON.

## 5.16 DURATION OF OUTPUTS: SWITCH OR PULSE TIMES

If an output is used, the time this output is activated can be set between 1 and 9999 seconds. If the setting is set to 0, the output does not return to its previous state automatically. An authorised number can switch it back by the SMS command O1OFF or O2OFF. In the factory settings the duration of the pulse time for the outputs is "10".

## 5.17 INITIAL STATE OUTPUT


In the factory settings the outputs are set to "open" (NO); they close after e.g. the SMS command "O1ON". This initial state can be set to "closed" (NC).

## 5.18 RESET TO FACTORY SETTINGS

It is possible to reset the Mobeye MS100E to factory settings.


- Remove power adapter (and battery if present)
- Restore the power source and keep the reset button pressed for about 15 seconds until a short melody sounds followed by 3 beeps.
- Release the button when the LED flashes

After several seconds a short confirmation tone is heard. The installation code is also reset to 1111.

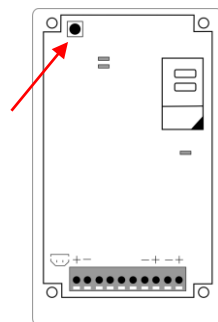

## 6. ACTION RULES

The alarm message and behaviour of the outputs of the Mobeye MS100E are programmed by action-reaction patterns. These so-called Action Rules are pre-programmed, according to the needs of many applications. However, it is possible to change these action rules (for advanced users only!).

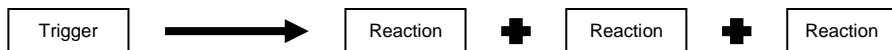

The trigger + related reactions are called an “action rule”. Each action rule may contain 3 reactions. A maximum of 15 action rules can be programmed.

### 6.1 PRE-PROGRAMMED ACTION RULES

In the factory defaults following action rules are pre-programmed:

Action rule number	Trigger	Reaction
1	Receive SMS	Switch outputs
2	Power failure	Send SMS + call
3	Power restored	Send SMS
4	Input 1 triggered	Send SMS + call
5	Input 2 triggered	Send SMS + call
6	Input 1 restored	Send SMS
7	Input 2 restored	Send SMS

The SMS texts are stored with a text number referring to the number of the action rules (e.g. TEXT2 and TEXT3). Texts for new action rules are stored and can be changed too (e.g. TEXT8). Please refer to 5.9.

### 6.2 TRIGGERS AND REACTIONS

#### TRIGGERS

For defining your own action rules, you can use triggers and combine them with reactions. As trigger the following events can be used:

Trigger	Command
Input 1 triggered	IN1
Input 2 triggered	IN2
Input 1 restored	IN1RESET
Input 2 restored	IN2RESET
Power failure	POWERFAIL
Power restore	POWERRESET
Incoming call	CALL
Time	TIME:hhmm (e.g. TIME:1230)

## REACTION

Each trigger can initiate a maximum of 3 reactions out of the following list:

Reaction	Command	Remark
Switch Output 1	O1ON, O1OFF, O1TGL	Toggle means the output switches each time the action is executed, regardless the current status
Switch Output 2	O2ON, O2OFF, O2TGL	
Send SMS	SEND:text	Max. 20 characters. An alarm SMS contains the identification text and the text as defined here. The text is also stored as TEXTy, where y stands for the action rule number.
Call	CALL	The unit calls the set alarm numbers. The receiver will hear a 2-tone signal and can confirm by pressing '1'.

### 6.3 PROGRAMMING ACTION RULES

Send following SMS commands in following format:

**CODE TRIGGER:REACTION1,REACTION2,REACTION3**

- Do not forget the space between CODE and the TRIGGER.
- The Mobeye MS100E will play a short melody to indicate a successful configuration. In case of a wrong command, a long beep will sound.

### 6.4 TIME-BASED ACTION RULES

It is possible to let the action be daily performed at a certain time. The time is the trigger. To program a time-based action, include the time in the action rule, in following way.

**CODE TIME:hhmm:REACTION**



**Example:**

1111 TIME:1115:O1ON



### 6.5 LIST OF PROGRAMMED ACTION RULES

A list of programmed action rules, the Action Rules List (ARL), can be requested by sending following SMS to the unit.

Request programmed action rules:  
**CODE ARLREPORT?**



**Example:**  
1111 ARLREPORT?

### 6.6 DELETE ACTION RULES

An action rule can be deleted by an SMS by the command below incl. index number. The index number is the sequence number of the action rule as displayed in the ARLREPORT.

**CODE DELARL:indexnumber**



**Example:**  
1111 DELARL:1

Remark: a rule will keep its index number, even if a rule with a previous number is deleted. This will result in "gap" in the index list. If a new Action Rule is added, this rule will get the index number of the first empty position.

## 7. COMPLETE LIST OF SETTINGS

Setting	Menu/ command	Options	Factory default
Installation code	INSTCODE:	4 digits	1111
Interval test message	TEST:	0, 1, 2, 3, ... or 30 (days)	0
SMS on/off	SMSALARM:	ON, OFF	ON
CALL on/off	CALLALARM:	ON, OFF	ON
Actual time	SETTIME:	hhmm	
Actual date	SETDATE:	yyyymmdd	
Automatic arming time	TIMEARM:	hhmm hhmm (delete by "OFF")	
Automatic disarming time	TIMEDISARM:	hhmm hhmm (delete by "OFF")	
Input type input 1	TYPEIN1:	OFF, NO, NC	ON
Input type input 2	TYPEIN2:	OFF, NO, NC	ON
Inactive time Input 1	INACTIVEINP1:	0..999 (min.)	5
Inactive time input 2	INACTIVEINP2:	0..999 (min.)	5
Delay time input 1	DELAY1:	0..999 (sec.)	1
Delay time input 2	DELAY2:	0..999 (sec.)	1
Power failure delay time	DELAYPOW:	00..60 (min.)	1
Pulse time output 1	TO1:	1..9999 (sec.)	10
Pulse time siren/output 2	TO2:	1..9999 (sec.)	10
Initial state output 1	INITSTATEO1:	OFF, ON	OFF
Initial state output 2	INITSTATEO2:	OFF, ON	OFF
Repeat	REPEAT:	0..99 (hours)	4
TEL1	TEL1:	Telephone number	
TEL2	TEL2:	Telephone number	
TEL3	TEL3:	Telephone number	
TEL4	TEL4:	Telephone number	
TEL5	TEL5:	Telephone number	
Delete telephone number	DEL1...DEL5		
Authorise telephone number	TELA1: ...TELA50: of ADDTELA:	Tel. number	
Delete authorised number	DELA:1..DELA:50		
Authorised remote control	AUTH:	ON, OFF	ON
Identification text	NAME:	20 characters	Mobeye
Alarm text power failure	TEXT2:	20 characters	Power failure
Alarm text power	TEXT3:	20 characters	Power

Setting	Menu/ command	Options	Factory default
restored			restored
Alarm text input 1	TEXT4:	20 characters	Alarm 1
Alarm text input 2	TEXT5:	20 characters	Alarm 2
Text restored input 1	TEXT6:	20 characters	Input 1 restored 2
Text restored input 2	TEXT7:	20 characters	Input 2 restored

Program method via SMS (in program mode):

**CODE COMMAND:OPTION**

Or several commands at once:

**CODE COMMAND:OPTION#COMMAND:OPTION#COMMAND:OPTION**

## **8. REPORTS AND LISTS**

The programmed settings and the Mobeye MS100E status can be requested as SMS-text message via SMS-command (be sure the unit has network connection).

### **8.1 STATUS REQUEST**

The status can be requested by sending an SMS with the content:

CODE STATUS? The originator of the request receives the armed/not armed status, the status of the inputs, power and batteries as SMS text message.

### **8.2 LIST OF SETTINGS**

The settings can be requested by sending an SMS with the content:

CODE SET? The originator of the request receives the list of basic settings.

### **8.3 AUTHORISATION LIST**

The list with authorised numbers for remote control can be requested by sending an SMS with the content:

CODE ANL? The originator of the request receives the authorised numbers as list.

### **8.4 TEST GSM NETWORK STRENGTH**

Before using the Mobeye MS100E is it advised to test the GSM signal strength at the location.

The list with the GSM signal strengths per found network can be requested by sending an SMS with the content:

CODE GSM? The originator of the request receives GSM signal strength as list.

### **Warning**

In the event of a weak signal, the Mobeye MS100E can still be used, but there is a risk that messages cannot be sent or will be received with a delay. In case of no signal, it is advised to try a different network.



## 9. ISSUE SOLVING AND TECHNICAL DATA

### Issues

<b>Error</b>	<b>Possible reason</b>	<b>Solution</b>
Mobeye MS100E does not work.	No valid Telephone number was entered.	Enter a valid number.
The light is flashing red during switching on.	No valid SIM card was entered or the SIM card was not made pin code free.	Check the SIM card.
No GSM signal during the GSM test.	No network is available, belonging to the SIM cards provider.	Choose another network provider.
The light remains red.	You entered an incorrect installation or user code three times.	Wait 10 minutes and then re-enter the correct installation or user code.
You do not receive an SMS with the settings.	Telephone number is not correct.	Re-program the telephone number at position '01'
For other questions, please refer to the site <a href="http://www.mobeye.eu">www.mobeye.eu</a>		

### Technical data

- GSM: Quad Band EGSM 850/900/1800/1900 MHz compatible to the ETSI GSM Phase 2+ standard
- Temperature range: -10°C until +55°C
- Dimensions: 161 x 90 x 35 mm (LxWxH)
- Back-up battery: Lithium-Ion, Mobeye article number AC-RBP1
- Power: 50 mA, short peaks of max. 2 A

For support on technical problems regarding Mobeye MS100E please contact [info@mobeye.eu](mailto:info@mobeye.eu).



## Declaration of Conformity

Herewith we, Mobeye, declare that the product

**Mobeye XM2 telemetry module**

And the derived products

**MS100, MS200, MS300, Call-Key**

are in compliance with the essential requirements of the following European standards / EU Directives:

**Directive 73/23/EEC** (low voltage directive)

**Directive IEC/EN 50130** Electromagnetic compatibility

**Directive 2014/53/EU (RED)**

The conformity with the essential requirements set out in Art.3 of the 2014/53/EU has been demonstrated against the following harmonized standards:

**EN 60950-1: 2006 + A11 : 2009 + A1: 2010 + A12: 2011 + A2: 2013**

**EN 62311 :2008**

**EN 301 489-1 V2.1.1, Draft EN 301 489-52 V1.1.0**

**EN 301 511 V12.5.1**

Mobeye B.V.  
Poeldonkweg 5  
5216 JX 's-Hertogenbosch  
The Netherlands

Name: J.P.K. van de Vijver,

Position: General Manager

Signature:

Date: 12 July 2017

This manual is published by Mobeye.

All rights, the translation included are reserved. Any reproduction, either photocopy, microfilm or saved in an automated data dictionary, only after written approval of the Publisher. Reprinting, even in summary, is prohibited.

This user manual meets the technical requirements at the moment of printing. Changes in technology and equipment are reserved.

© Copyright 2018 by Mobeye, version MS100EEN180401

