



USER MANUAL

Mobeye® WaterGuard

leakage sensor

CM2300

SW version 3.n

Attention! Very important

This user manual contains important guidelines for the installation and usage of the Mobeye® device as described in this manual. Please read these thoroughly before you start using the Mobeye® device!

In case of damage caused by disregarding the guidelines, the warranty becomes void.

The user must regularly check the proper functioning of the device. The manufacturer cannot be held liable for any damage or loss caused by any incorrect use or incorrect functioning of the Mobeye® device.

Safety guidelines

- The permitted ambient temperature during operation may not be exceeded (not lower than -10°C and not higher than 50°C).
- The device is intended for use in dry and clean places.
- Protect the device from moisture, heat and water splashing. Not intended for external use.
- The guidelines for the battery usage must be regarded.
- Do not expose the device to strong vibrations.
- Do not let it fall from height.
- Do not use in an environment where any inflammable gases, vapors or dust are present or could be present.
- Repair of the device may only be carried out by people, trained for Mobeye® repair.
- If the device must be repaired, only original replacement components may be used. The use of different parts may lead to damage of the Mobeye® device.

Use in accordance with the regulations

The purpose of this device in accordance with the regulations is sending SMS text messages and making telephone calls after an alarm situation. Other uses are not permitted and may invalidate the warranty.

Battery recycling

CR123 batteries, as used in the Mobeye WaterGuard, are classified as non-hazardous waste and can be recycled. Please take empty batteries to a nearest collection point.

CONTENT

1.	General description	1
2.	Getting started	2
2.1	Insert a SIM card	2
2.2	Connect the watersensor	3
2.3	Insert the batteries	3
2.4	Enter the program mode	3
2.5	Program at least one telephone number	3
2.6	Switching on/off	4
3.	Use of inputs and external power supply	5
3.1	Using the input	5
3.2	Use of external power supply	5
4.	Configuration	7
4.1	Program mode	7
4.2	The (security) code	8
4.3	Programming the settings by SMS	8
4.4	List of SMS commands for configuration	9
5.	Possible settings	10
5.1	Phone numbers	10
5.2	Identification text	10
5.3	Alarm texts	11
5.4	SMS on/off	11
5.5	Call on/off	11
5.6	Input type	12
5.7	Exit delay time	12
5.8	Alarm delay time	13
5.9	Inactive time	13
5.10	Alarm repeat time	14
5.11	Power failure delay time	14
5.12	Power failure message	14
5.13	Test message	15
5.14	System reset	15
6.	Request list of the settings and status	16
7.	Technical messages and status feedback	17

1. GENERAL DESCRIPTION

The Mobeye WaterGuard is a battery operated GSM module used to send out an alarm after detection of a water based fluid, after a triggered input or - if external power supply is used- after a power failure. The Mobeye WaterGuard can also detect the absence of water.

The Mobeye WaterGuard is pre-programmed with standard action-reaction patterns. To change this behaviour please refer to chapter 4.

The factory settings of the Mobeye WaterGuard cause following reactions:

- If the water sensor is closed, the Mobeye WaterGuard sends an alarm SMS text message and calls to the phone numbers as programmed. The SMS message contains the text 'Mobeye Water alarm'.
- As soon as no water is detected anymore, an SMS text message is sent to the set telephone numbers containing the text 'Mobeye Water Level OK'.
- If the additional input is activated by a sensor, the Mobeye WaterGuard sends an alarm SMS text message and calls to the phone numbers as programmed by the user.
- If the water sensor and/or the input remain in the alarm status, the Mobeye WaterGuard repeats sending the SMS alarm message every four hours.
- When the batteries need to be replaced, the Mobeye WaterGuard sends a 'battery low' SMS text message to the administrator.
- In case an external power supply is used and a power failure occurs, the Mobeye WaterGuard sends a 'power failure' SMS text message to the administrator. When the power is restored, the Mobeye WaterGuard sends a 'power restored' SMS text message to the administrator.

2. GETTING STARTED

To get started with the Mobeye WaterGuard at least the following steps need to be taken in the following order:

1. Insert a SIM card
2. Connect the water sensor to the input
3. Insert the batteries
4. Enter the program mode
5. Program at least one telephone number (administrators' number)
6. Arming/disarming the system

These steps are further explained in this chapter. After these steps the module will be operational.

2.1 INSERT A SIM CARD

Open the enclosure with the 4 screws and insert a SIM card into the module. Push the black cover outward slightly to open the holder. Before installing the SIM card should have PIN code "0000", or PIN code removed.

(A PIN code can be changed or removed by putting the SIM card in to any mobile phone and entering the 'security' menu)

NB: Make sure the SIM card is inserted before the batteries are inserted. In case of a SIM card change, please first remove the batteries (and remove any other external power supply).

2.2 CONNECT THE WATERSENSOR

Plug the external water sensor into the metal socket and press it firmly.

Mount the sensor to a fixed place in vertical position at the height where the presence of water should be detected..

2.3 INSERT THE BATTERIES

Insert the two batteries (CR123) in the module. Use the +/- indication for the correct placement. The green LED will flash to indicate that the module is not configured (at least one telephone number should be programmed).

2.4 ENTER THE PROGRAM MODE

Directly after inserting the batteries, the Mobeye WaterGuard switches to the program mode. First the GSM module establishes network connection. During this time the LED flashes 2 sec. on/1 sec. off. Within 10-30 seconds the connection is established and the status LED starts flashing 1 sec. on/1 sec. off (or stays on continuously in case the first telephone number has been configured).

The Mobeye WaterGuard returns to the program mode by pressing the on/off button for 5 seconds, until the LED starts flashing (or stays on continuously).

As long as the unit is in the program mode, the status green LED is on (or flashing 1 sec. on/1 sec. off if the module has no configuration). During the first 3 minutes, the GSM module remains active, ready to receive SMS commands. After 3 minutes a time-out occurs and the GSM module switches off in order to save the batteries. The unit returns to the low power operational mode.

2.5 PROGRAM AT LEAST ONE TELEPHONE NUMBER

The Mobeye WaterGuard is able to send messages up to 5 telephone numbers. The first telephone number belongs to the administrator. Technical messages (like *battery low*) are sent to the administrator only. Without the administrators' phone number, the Mobeye WaterGuard cannot function.

If the WaterGuard is in initial (factory) status and the batteries are inserted (so the LED is flashing), the administrators' number is programmed by calling the telephone number of the Mobeye WaterGuard using the administrators' phone. The unit will recognize this number and store it as administrator (telephone number 1). The administrator will receive a confirmation SMS text message including the security code. This code is needed to program the other settings in the unit.

NB: For this way of programming the number recognition in the administrator's phone must be 'on'. To program or change the administrators' number by SMS command, please refer to 4.2.

2.6 SWITCHING ON/OFF

After the previous steps, the Mobeye WaterGuard is ready for use. It is armed (switched on) automatically. The green LED blinks once every 3 seconds.

In order to switch off (disarm) the Mobeye WaterGuard:

- Press the on/ off button at the upper side for 1 second. The green LED switches off to indicate the disarmed status.

In order to switch on (arm) the Mobeye WaterGuard:

- Press the on/ off button at the upper side for 1 second. The green LED blinks once every 3 seconds (or stays on continuously in case of an external power supply) to indicate the armed status.

3. USE OF INPUTS AND EXTERNAL POWER SUPPLY


3.1 USING THE INPUT

It is possible to connect sensors to the inputs. As a standard reaction after a triggered input, the Mobeye WaterGuard sends an SMS text message to the preset numbers and calls these numbers. Insert the 2 wires of an external sensor through the hole of the enclosure to the inside part and next in the two connectors of input 1 (press on the green pins for connecting the wires). It does not matter which wire is connected to which connector.

If necessary the wires can be extended up to 5 meters using appropriate wire material.

When using a second input, connect this to input 2.

As default the inputs are programmed as Normally Open (NO) contacts. This means the inputs are triggered if the input is closed for at least 1 second. In case the contact is Normally Closed (NC), please refer to paragraph 5.6. If you require a sensor to be activated for a shorter or longer period before triggering an alarm, please refer to 5.8.

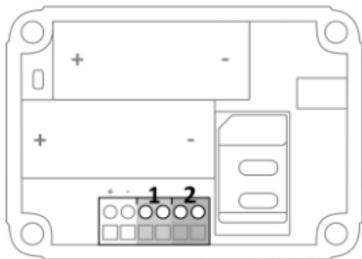


3.2 USE OF EXTERNAL POWER SUPPLY

Although the Mobeye WaterGuard is designed to run on batteries, it is possible to use an external power supply. In this mode the module is always in connection with the GSM network and therefore always in program mode. In case the power fails, the batteries take over the functioning and the administrator is informed by an SMS text message. The module continues operating albeit in the low power mode. This means the GSM module switches off and only establishes network connection in case it needs to send out an alarm, test message or low battery alert.

Connect the external power adapter (or any other regulated 12VDC power supply) to the power input of the connector (press on the green pins for connecting the wires):

- V+ (black lead with white stripe) to “+”
- Ground (black lead) to “-“

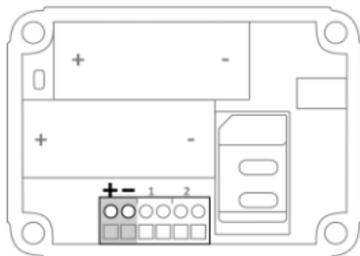

4. CONFIGURATION

To program the Mobeye WaterGuard, the GSM module must have network connection. In case only batteries are used, first switch the unit to the program mode. Next send SMS commands for the configuration.

All settings are stored and will be kept in the unit, even in case the power supplies are removed.

4.1 PROGRAM MODE

Directly after inserting the batteries, the Mobeye WaterGuard switches to the program mode. First the GSM module establishes network connection. During this time the LED flashes 2 sec. on/1 sec. off. Normally this takes 10-30 seconds. Once the connection is established the status LED starts flashing 1 sec. on/1 sec. off (or stays on continuously in case the first telephone number has been configured).

In program mode, the device is ready to receive SMS commands. If no correct command is received for 3 minutes, the GSM module switches off in order to save the batteries. The unit returns to the low power operational mode. The Mobeye WaterGuard returns to the program mode by pressing the on/off button for 5 seconds, until the LED starts flashing (or stays on continuously).

If the unit is connected to an external power supply, the WaterGuard has network connection all the time and the unit is in program mode all the time.

The program mode is interrupted by pressing the on/off button for one second until the LED switches off. The unit is switched off completely (disarmed).

4.2 THE (SECURITY) CODE

For configuration activities the (security) code of the Mobeye WaterGuard must be used. The initial (security) code is '1111'. You can change the (security) code to your own code. See section 4.4.

4.3 PROGRAMMING THE SETTINGS BY SMS

To program the settings by SMS text message:

1. Be sure the WaterGuard is in program mode (please refer to 4.1).
2. Send an SMS message with the (security) code and the command
3. The green LED blinks 3 times to indicate the successful configuration. In case of an incorrect command, the red LED flashes 5 times.

SMS messages should have the following content: **CODE COMMAND:OPTION**

- Do not forget the space character between (security) code and command.
- The commands are case sensitive. Use capitals for the commands.
- Several commands may be combined in one SMS message (with a maximum of 160 characters) by placing a # between the commands.

CODE COMMAND:OPTION#COMMAND:OPTION#COMMAND:OPTION

See section 4.4 for a full list of SMS commands.
--

4.4 LIST OF SMS COMMANDS FOR CONFIGURATION

The setting options for the WaterGuard.

Setting	SMS Command	Options	Default value
Change security code	INSTCODE:	0000..9999	1111
Set telephone number for alarm messages	TEL1: TEL5:		Empty
Delete telephone number	DEL1 DEL5		
Identification text	NAME:	20 characters	Mobeye
Call on/off	CALL:	ON, OFF	ON
SMS on/off	SMS:	ON, OFF	ON
Input type input 1	TYPEIN1:	NO, NC	NO
Input type input 2	TYPEIN2:	NO, NC	NO
Input type water input 3	TYPEIN3:	NO, NC	NO
Delay on input 1	DELAY1:	0..999 (sec)	1
Delay on input 2	DELAY2:	0..999 (sec)	1
Delay watersensor	DELAY3:	0..999 (sec)	60
Inactive time input 1	INACTIVEIN1:	0..60 (min)	0
Inactive time input 2	INACTIVEIN2:	0..60 (min)	0
Inactive time watersensor	INACTIVEIN3:	0..60 (min)	0
Alarm repeat time	REPEAT:	0..24 (hrs)	4
Alarm text water alarm	TEXT1:	20 characters	Water alarm
Text water alarm restore	TEXT2:	20 characters	Water level OK
Alarm text input 1	TEXT3:	20 characters	Alarm 1
Alarm text input 2	TEXT4:	20 characters	Alarm 2
Power failure delay time	DELAYPOW:	0..999 (min)	0
Power message	POWERMESSAGE:	OFF,ALERT,A LARM	ALARM
Interval 'test SMS'	TEST:	0..30 (days)	0

Examples:

Set phone number 1 : 1111 TEL1:0712345678

Be aware of the space between "1111" and the command

5.3 ALARM TEXTS

Unique alarm texts can be programmed into the Mobeye WaterGuard. User defined texts have a maximum length of 20 characters.

Following default texts are programmed:

Text 1 (water alarm):	Water alarm
Text 2 (water alarm restore):	Water level OK
Text 3 (input 1):	Alarm 1
Text 4 (input 2):	Alarm 2

SMS command text water alarm:	TEXT1:
SMS command text water restore:	TEXT2:
SMS command text input 1:	TEXT3:
SMS command text input 2:	TEXT4:
example:	1111 TEXT1:water in cellar

5.4 SMS ON/OFF

By default, the Mobeye WaterGuard sends alarm notifications via text message and calls (you will hear a beep signal) to the preset contact persons. By turning off the SMS, the unit will only call after a triggered input.

SMS command enable / disable SMS:	SMS:ON or SMS:OFF
example:	1111 SMS:OFF

5.5 CALL ON/OFF

By default, the Mobeye WaterGuard sends alarm notifications via text message and calls to the preset contact persons. By turning off the CALL, the unit will only send an SMS text message as alarm notification. It is not possible to switch off both the SMS and the call.

SMS command enable / disable call:	CALL:ON or CALL:OFF
example:	1111 CALL:ON

5.6 INPUT TYPE

As default behaviour the Mobeye WaterGuard sends out an alarm after detection of a water based fluid. In case the water level in a tank should be monitored, the WaterGuard needs to send out the alarm as soon as the sensor detects the absence of water. As default the input type IN3 is set to NO (normally open); for alarming the absence of water, IN3 needs to be changed to NC (normally closed).

SMS command input type water sensor: **TYPEIN3:NO** or **TYPEIN3:NC**
example: 1111 TYPEIN3:NC

The input types IN1 and IN2 define the character of the additional inputs IN1 and IN2. This can be Normally Open (NO) or Normally Closed (NC). In case an input is set to NO, the alarm will be triggered as soon as the terminals of the input are closed. If the input is set to NC, the alarm is triggered in case the connection between the input terminals is broken. The default input type is set to NO.

SMS command input type input 1: **TYPEIN1:NO** or **TYPEIN1:NC**
SMS command input type input 2: **TYPEIN2:NO** or **TYPEIN2:NC**
example: 1111 TYPEIN1:NC

5.7 EXIT DELAY TIME

The exit delay time defines the time between the moment of switching on the module – while the input is active – and the moment the module starts sending the first alarm message. Example: the module was installed in a cabinet where a door magnet contact is connected to the input. The exit delay time is the time between switching on the module and closing the cabinet's door. As soon as this time has exceeded, the alarm message will be sent. The time can be set between 0 and 999 seconds. As default, the exit delay time is set to 1 second.

SMS command exit delay input 1: **DELAYEXIT1:**
SMS command exit delay input 2: **DELAYEXIT2:**
SMS command exit delay water sensor: **DELAYEXIT3:**
example: 1111 DELAYEXIT2:806

5.8 ALARM DELAY TIME

The input delay time defines the time that the input is triggered before an alarm is initiated. If the input returns to the non-alarm status within the delay time, no alarm is sent. The time can be set between 0 and 999 seconds.

As default, the input delay time for IN1 and IN2 is set to 1 second, for the water sensor to 60 seconds.

SMS command alarm delay input 1:	DELAY1:
SMS command alarm delay input 2:	DELAY2:
SMS command alarm delay water sensor:	DELAY3:
example:	1111 DELAY1:999

5.9 INACTIVE TIME

The "inactive time" defines the time input 1 or input 2 is not active after an activation. If the time is set to "0" (minutes), the input is active again immediately after returning to the non-alarm status. If the time is set to e.g. 30 minutes, the input remains inactive for the first 30 minutes. If the input is again (or still) activated after these 30 minutes, a new alarm message is sent. The time can be set between 0 and 60 minutes. As default, the inactive time is set to "0".

SMS command inactive time input 1:	INACTIVEIN1:
SMS command inactive time input 2:	INACTIVEIN2:
SMS command inactive time water sensor:	INACTIVEIN23:
example:	1111 INACTIVEIN2:45

5.13 TEST MESSAGE

The Mobeye WaterGuard can send regular test SMS messages (*keep alive*) to the administrator (first phone number), to ensure the proper functioning of the unit. The test message function is only active if the unit is armed. The interval between the test messages can be set between 0 days (no test message) and 30 days. The default test interval is set to 0 (no test message).

SMS command interval test message: **TEST:**
example: 1111 TEST:21

5.14 SYSTEM RESET

To reset the Mobeye WaterGuard to its factory settings:

1. Remove the batteries (and external power supply)
2. Press the outside button while reinserting the batteries. Keep it pressed for (about) another 5 seconds
3. Release the button immediately after the LED starts to flash
4. If relevant, connect the external power supply.

After a successful reset, the status LED on the keypad will blink green to indicate that the module is not configured. The security code is back to factory settings as well.

6. REQUEST LIST OF THE SETTINGS AND STATUS

The programmed settings and status of the GSM detector can be retrieved by SMS message. Before sending the request, make sure the unit is in the program mode (please refer to 4.1).

STATUS REQUEST

The status of the Mobeye WaterGuard can be requested by sending an SMS with the content:

SMS command status request:	STATUS?
example:	1111 STATUS?

Upon sending this request, the Mobeye WaterGuard returns the status to the originator of the request. The status message includes the ARMED / NOT CONFIGURED status of the Mobeye WaterGuard, the status of the inputs, power and batteries.

LIST OF GENERAL SETTINGS

The general settings of the Mobeye WaterGuard can be requested by sending an SMS with the content :

SMS command list general settings:	SET?
example:	1111 SET?

LIST OF PHONE NUMBERS

The list of telephone numbers can be requested by sending an SMS message with the content :

SMS command list of phone numbers:	CALL?
example:	1111 CALL?

7. TECHNICAL MESSAGES AND STATUS FEEDBACK

Technical messages

In the event of technical issues the administrator receives an SMS message. Possible technical messages are:

Message	Reason
Low batteries, external power supply OK	Power is available, batteries need to be replaced
No external power supply, batteries OK	No external power supply, batteries are able to take over operation in low power mode
Low batteries, no external power supply	No external power supply, batteries need to be replaced
External power supply OK, batteries OK	The external power is restored (or the adapter is plugged in a socket), batteries do not need to be replaced
(delayed message)	If (delayed message) is added to the SMS text messages, the message couldn't be sent earlier, due to a SIM card failure or GSM network failure.

When receiving one of the above mentioned technical messages, please take appropriate action as soon as possible. During the battery replacement, the SIM card does not have to be removed.

Status feedback

LED pattern	Status	Required action
Blinking green, 1 second on / 1 second off	Module not configured	Configure at least one telephone number
1 green flash every 3 seconds	Module is switched on, powered by batteries	No action required
Green LED stays on continuously	Module is switched on, powered by an external source	No action required
Blinking green, 2 seconds on, 1 second off	Module establishes network connection to send an alarm message	Wait until the network connection is established and the message is sent
Blinking green, 3 seconds on, 1 second off	Module establishes network connection to get to program mode	Wait until the network connection is established before programming
2 flashes red, every 3 seconds	No GSM connection	Try the SIM card in any mobile telephone; replace SIM card using other telecom provider; try the module at another location
3 flashes red, every 3 seconds	No valid SIM card or wrong PIN	Try the SIM card in any mobile telephone; remove PIN code; check credit; replace SIM card
Blinking 3 times green	Successful programming action	No action required
Blinking 5 times red	Faulty programming action	Check SMS command
4 red flashes every 3 seconds	Low batteries	Replace both batteries

Technical specifications

GSM	: Quad band EGSM, 850/900/1800/1900 MHz
Batteries	: 2* CR123 (lithium)
Battery life in normal mode	: >1 year
Ext. power connection	: 12 VDC (+/- 2 VDC) / min. 500 mA. (optional)
Power consumption low power	: ca 50 μ A. stand-by / max. ca. 500 mA
Power consumption 12V	: ca 50 mA. stand-by / max. ca. 500 mA
Dimensions	: 80 x 60 x 40 mm
Ambient temperature	: -10 °C until +50 °C

This manual is published by Mobeye®.

All rights, the translation included are reserved. Any reproduction, either photocopy, microfilm or saved in an automated data dictionary, only after written approval of the Publisher. Reprinting, even in summary, is prohibited.

This user manual meets the technical requirements at the moment of printing. Changes in technology and equipment are reserved.

© Copyright 2014 by Mobeye, version CM2300EN140514



Declaration of Conformity

Herewith we, Mobeye, declare that the product

Mobeye CM21 telemetry module

And the derived products

**CM2000, CM2100, CM2200, CM2300,
CM2300FS, CM2400, CM2500, CM2600**

are in compliance with the essential requirements of the following European standards / EU Directives:

Directive 73/23/EEC (low voltage directive)

Directive IEC/EN 50130 Electromagnetic compatibility

Directive 1995/5/EC R&TTE (Radio & Telecommunications Terminal Equipment)

The conformity with the essential requirements of 1995/5/EC has been verified against:

ETSI EN 301 489-1 V1.5.1

ETSI EN 301 489-7 V1.2.1

ETSI EN 301 511 V9.0.2

CENELEC EN 60950:2001

Mobeye B.V., Poeldonkweg 5, 5216 JX 's-Hertogenbosch, The Netherlands

Name: J.P.K. van de Vijver,

Position: General Manager

Date: 31 maart 2013

